



2023+ HONDA CIVIC TYPE R MUD FLAP INSTALLATION INSTRUCTIONS

Manufacturer warranty covers material defects on new, never installed parts. Once installed, all mud flap replacement part costs are the responsibility of the vehicle owner. Caution against blind spots during parking. Avoid curbs and excessive compression to the flaps. Check stock and aftermarket wheel/suspension clearances.

INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → www.rallyarmor.com/support Recommended Tools 10mm/11mm wrench, Phillips screwdriver, pick.

Install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE.

ABOUT OUR STANDARD IN MUD FLAPS Polyurethane is a high grade plastic that may feature minor surface layer marks. These are visual variations that don't affect flap construction or performance. Most matte away as the material ages naturally.

MF97 KIT CONTENTS CONFIRM ALL PARTS AND QUANTITIES BEFORE INSTALLATION		
MUD FLAP PN: MF97 SEE PAGE 4	PART DESCRIPTION	QUANTITY
MF97-LF	LEFT FRONT	1
MF97-RF	RIGHT FRONT	1
MF97-LR	LEFT REAR	1
MF97-RR	RIGHT REAR	1
BRACKET PN: BMF97		
BMF97-LR	BRACKET LEFT REAR	1
BMF97-RR	BRACKET RIGHT REAR	1
HARDWARE PN: HMF97		
1SP O	SPACER	2
2SS Diministra	SCREW	2
BLKNUT	NUT	2
HXBLT	BOLT	2
INS5	INSERT	4
SMWASH	WASHER	20
SSLNUT	LOCK NUT	4





2023+ HONDA CIVIC TYPE R MUD FLAP INSTALLATION INSTRUCTIONS


FRONT FLAP To access interior wheel well, turn steering wheel towards installation side. Do not fully tighten fasteners until

flaps are aligned to vehicle. Bracket/Hardware x 1 Flap→ 1 x 1SP; 1 x 2SS; 2 x INS5; 4 x SMWASH

FIGURE A Remove factory fasteners 1 – 5, retaining screws 2, 3 & 5 for reuse.

FIGURE B Unscrew fastener 6 screw only, leaving anchor portion intact.

FIGURE C Position logo-side of flap facing rear bumper, against mounting points. Place 1SP between flap & mount 6, then install SMWASH & 2SS.

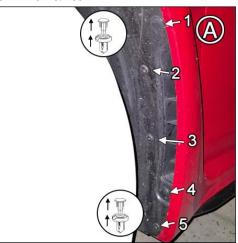



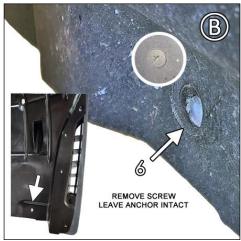




FIGURE D/E Install SMWASH & factory screws into mounts 2, 3 & 5 and INS5 into mounts 1 & 4.

FIGURE F Align flap to even ground then tighten hardware until washers are just seated.

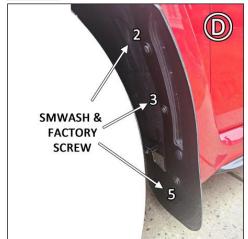

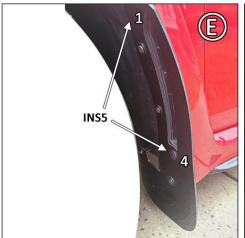








2023+ HONDA CIVIC TYPE R MUD FLAP INSTALLATION INSTRUCTIONS


REAR FLAP Do not fully tighten fasteners until mud flap is aligned to vehicle.

Bracket/Hardware x 1 Flap→1 x BMF97-LR/RR; 1 x BLKNUT; 1 HXBLT; 6 x SMWASH; 2 x SSLNUT

FIGURE G Temporarily remove and retain factory screws 1 - 3.

FIGURE H/I Place BMF97-LR/RR between liner & bumper skin, aligned to mounts 2 & 3. Angled section between bumper & liner, reinstall factory screw into mount 3.

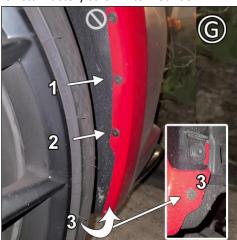

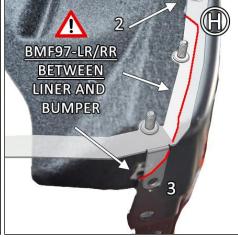



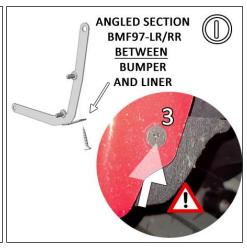


FIGURE J Place logo-side of flap facing rear bumper, against mounting points. Install SMWASH & factory screws into mounts 1 & 2 and SMWASH & SSLNUT into mounts 4 & 5.

FIGURE K Install SMWASH & HXBLT through flap/bracket mount 6. Secure with SMWASH & BLKNUT. Bend BMF97-LR/RR towards bumper if more tire clearance is required.

FIGURE L Align flaps to even ground before tightening fasteners until washers are just seated.

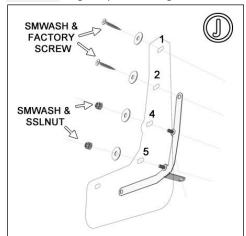

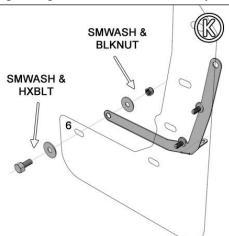



IMF97



2023+ HONDA CIVIC TYPE R MUD FLAP INSTALLATION INSTRUCTIONS

