



2024+ Hyundai Elantra N Line Mud Flap Installation Instructions

Manufacturer warranty covers material defects on new, never installed parts. Once installed, all mud flap replacement part costs are the responsibility of the vehicle owner. Caution against blind spots during parking. Avoid curbs and excessive compression to the flaps. Check stock and aftermarket wheel/suspension clearances.

INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → www.rallyarmor.com/support

Recommended Tools Low-profile offset, ratcheting, flat & Phillips screwdrivers, pick.

ONLY install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE.

ABOUT OUR STANDARD IN MUD FLAPS Polyurethane is a high grade plastic that may feature minor surface layer marks. These are visual variations that don't affect flap construction or performance. Most matte away as the material ages naturally.

MF120 KIT CONTENTS CONFIRM ALL PARTS AND QUANTITIES BEFORE INSTALLATION			
MUD FLAP KIT	PN: MF120 SEE PAGE 3 DRAWINGS	PART DESCRIPTION	QUANTITY
MF69-LF		LEFT FRONT	1
MF69-RF		RIGHT FRONT	1
MF120-LR		LEFT REAR	1
MF120-RR		RIGHT REAR	1
BRACKET KIT PN: BMF120			
BMF63	00 0	FRONT BRACKET	2
BMF92-LR		BRACKET LEFT REAR	1
BMF92-RR		BRACKET RIGHT REAR	1
HARDWARE KIT PN: HMF120			
1SS	Million.	SCREW	10
2.5SS	Annunum -	LONG SCREW	2
1.5SP		SPACER	2
INS5		INSERT	2
SMF29-1		FOAM SPACER	6
SMWASH		WASHER	16
SSLNUT		LOCK NUT	4

FRONT FLAP 1 Flap Bracket & Hardware → 1 x BMF63; 2 x 1SS; 1 x 1.5SP; 1 x 2.5SS; 3 x SMWASH

To access inner wheel well area, turn steering wheel towards installation side. Do not fully tighten fasteners until flap is completely aligned to vehicle.

FIGURE A Remove liner screws 1 - 3.


FIGURE B Logo-side of flap facing vehicle rear, place BMF63 over flap mounts 1 & 2, then install 1SS & SMWASH. Place 1.5SP between flap & liner mount 3, then fasten with 2.5SS & SMWASH.


FIGURE C Align flaps to even ground before tightening fasteners until just seated.

IMF120



2024+ Hyundai Elantra N Line Mud Flap Installation Instructions

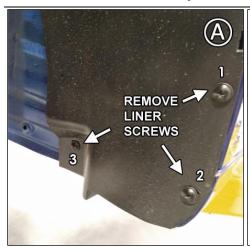

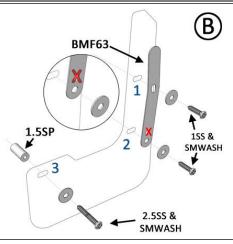




REAR FLAP Bracket/Hardware 1 x Flap →1 x BMF92-LR/RR; 3 x 1SS; 1 x INS5; 3 x SMF29-1; 5 x SMWASH; 2 x SSLNUT


Do not fully tighten fasteners until flap is completely aligned to vehicle.


FIGURE G Remove fasteners 1 – 4. Wipe liner clean.

FIGURE H Adhere SMF29-1 over mounts 1 - 3. Place stud-side of BMF92-LR/RR facing tire, over mount 4. Secure with INS5.

FIGURE I Position logo-side of flap facing vehicle rear. Install 1SS & SMWASH into mounts 1 – 3 and SMWASH & SSLNUT onto mounts 5 & 6. Align flaps to even ground before tightening fasteners until just seated.

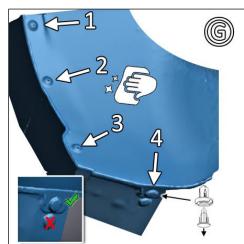

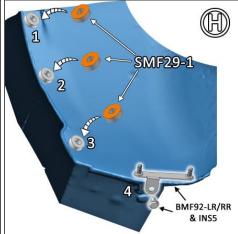

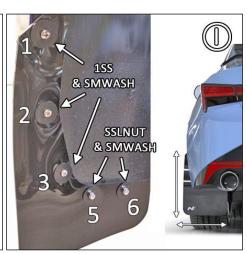

IMF120



2024+ Hyundai Elantra N Line Mud Flap Installation Instructions

