

## 2024+ Tesla Cybertruck Mud Flap Installation Instructions








Manufacturer warranty covers material defects on new, never installed parts. Once installed, all mud flap replacement part costs are the responsibility of the vehicle owner. Caution against blind spots during parking. Avoid curbs and excessive compression to the flaps. Check stock and aftermarket wheel/suspension clearances.

**INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → [www.rallyarmor.com/support](http://www.rallyarmor.com/support)**

**Recommended Tools** Low-profile offset, ratcheting, flat & Phillips screwdrivers, pick.

**ONLY install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE.**

**ABOUT OUR STANDARD IN MUD FLAPS** Polyurethane is a high grade plastic that may feature minor surface layer marks. These are visual variations that don't affect flap construction or performance. Most matte away as the material ages naturally.

MF112 KIT CONTENTS CONFIRM ALL PARTS AND QUANTITIES BEFORE INSTALLATION			
MUD FLAP KIT PN MF112 SEE PAGE 3 DRAWINGS		PART DESCRIPTION	QUANTITY
MF112-LF		LEFT FRONT	1
MF112-RF		RIGHT FRONT	1
MF112-LR		LEFT REAR	1
MF112-RR		RIGHT REAR	1
BRACKET KIT PN BMF112			
BMF112-FRT		BRACKET FRONT	2
BMF112-RE		BRACKET REAR	2
HARDWARE KIT PN HMF112			
1SS#8		SCREW	12
SMWASH		WASHER	12
EXPANCH		EXPANSION ANCHOR	12

## 2024+ Tesla Cybertruck Mud Flap Installation Instructions

**FRONT FLAP** To access interior wheel well, turn steering wheel towards installation side.


**Do not fully tighten fasteners until flap is fully aligned to vehicle.**

**Bracket/Hardware 1 x Flap → 1 x BMF112-FRT; 3 x 1SS#8; 3 x EXPANCH; 3 x SMWASH**

**FIGURE A** Remove fasteners 1 - 3.

**FIGURE B** Fold EXPANCH, then install into mounts 1 - 3. Use a pick to open hole of EXPANCH by inserting 1" into its center.

**FIGURE C** Place logo-side of flap facing vehicle rear and BMF112-FRT over flap. Install SMWASH & 1SS#8 into mounts 1 - 3. Align flaps to even ground. Tighten fasteners until washers are just seated against flap.

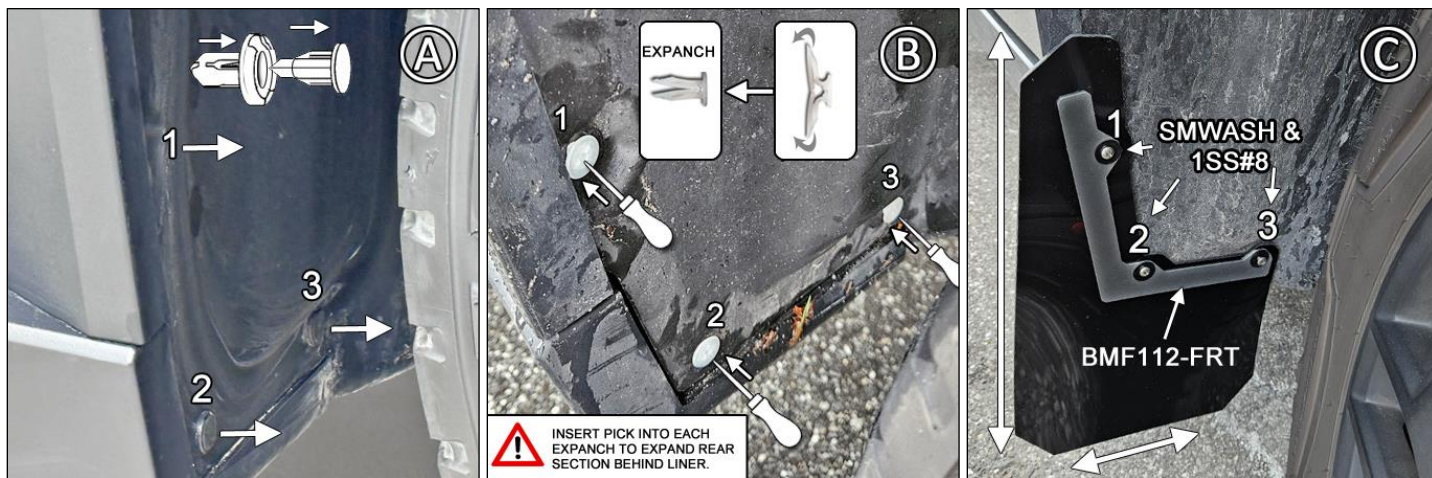

**REAR FLAP** Do not fully tighten fasteners until flap is fully aligned to vehicle.

**Bracket/Hardware 1 x Flap → 1 x BMF112-RE; 3 x 1SS#8; 3 x EXPANCH; 3 x SMWASH**

**FIGURE D** Remove fasteners 1 - 3.

**FIGURE E** Fold EXPANCH, then install into mounts 1 - 3. Use a pick to open hole of EXPANCH by inserting 1" into its center.

**FIGURE F** Place logo-side of flap facing vehicle rear and BMF112-RE over flap. Install SMWASH & 1SS#8 into mounts 1 - 3. Align flaps to even ground. Tighten fasteners until washers are just seated against flap.



## IMF112



### 2024+ Tesla Cybertruck Mud Flap Installation Instructions



FRONT

MF112 MOUNTING DIAGRAM

REAR

