

# IMF82



## 2022+ SUBARU FORESTER & FORESTER WILDERNESS MUD FLAP INSTALLATION INSTRUCTIONS















Manufacturer warranty covers material defects on new, never installed parts. Once installed, all mud flap replacement part costs are the responsibility of the vehicle owner. Caution against blind spots during parking. Avoid curbs and excessive compression to the flaps. Check stock and aftermarket wheel/suspension clearances.

**INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO →**

[www.rallyarmor.com/support](http://www.rallyarmor.com/support)

**Recommended Tools** 10mm/11mm wrench, Phillips screwdriver, pick. **Install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE.**

**ABOUT OUR STANDARD IN MUD FLAPS** Polyurethane is a high grade plastic that may feature minor surface layer marks. These are visual variations that don't affect flap construction or performance. Most matte away as the material ages naturally.

<b>MF82 KIT CONTENTS CONFIRM ALL PARTS AND QUANTITIES BEFORE INSTALLATION</b>			
<b>MUD FLAP PN: MF82</b> SEE PAGE 4		<b>PART DESCRIPTION</b>	<b>QUANTITY</b>
MF82-LF		LEFT FRONT	<b>1</b>
MF82-RF		RIGHT FRONT	<b>1</b>
MF82-LR		LEFT REAR	<b>1</b>
MF82-RR		RIGHT REAR	<b>1</b>
<b>BRACKET PN: BMF82</b>			
BMF82-LF		BRACKET LEFT FRONT	<b>1</b>
BMF82-RF		BRACKET RIGHT FRONT	<b>1</b>
BMF52-LR		BRACKET LEFT REAR	<b>1</b>
BMF52-RR		BRACKET RIGHT REAR	<b>1</b>
<b>HARDWARE PN: HMF82</b>			
1SS		SCREW	<b>6</b>
1.5SS		LONG SCREW	<b>6</b>
INS7		INSERT	<b>2</b>
POLCLP		CLIP	<b>10</b>
SMF29-1		ROUND SPACER	<b>6</b>
SMF52		SPACER	<b>2</b>
SMWASH		WASHER	<b>16</b>
SSLNUT		LOCK NUT	<b>4</b>

**2022+ SUBARU FORESTER & FORESTER WILDERNESS MUD FLAP INSTALLATION INSTRUCTIONS**


**FRONT FLAP** 1 Flap Bracket & Hardware → BMF82-LF/RF; 3 x 1.5SS; 3 x POLCLP; 3 x SMF29-1; 1 x SMF52; 4 x SMWASH; 1 x SSLNUT

Turn steering wheel towards installation side to access inner wheel well area. **Avoid overtightening hardware.**

**FIGURE A** Temporarily remove factory fasteners 1 - 4, then pull liner away.

**FIGURE B** Install POLCLP over mounts 1 - 3. Mount 1 POLCLP installs **behind** side skirt, over fender.


**FIGURE C** Wipe liner clean, then adhere SMF29-1 onto mounts 1 - 3. Adhere SMF52 onto top section of liner.

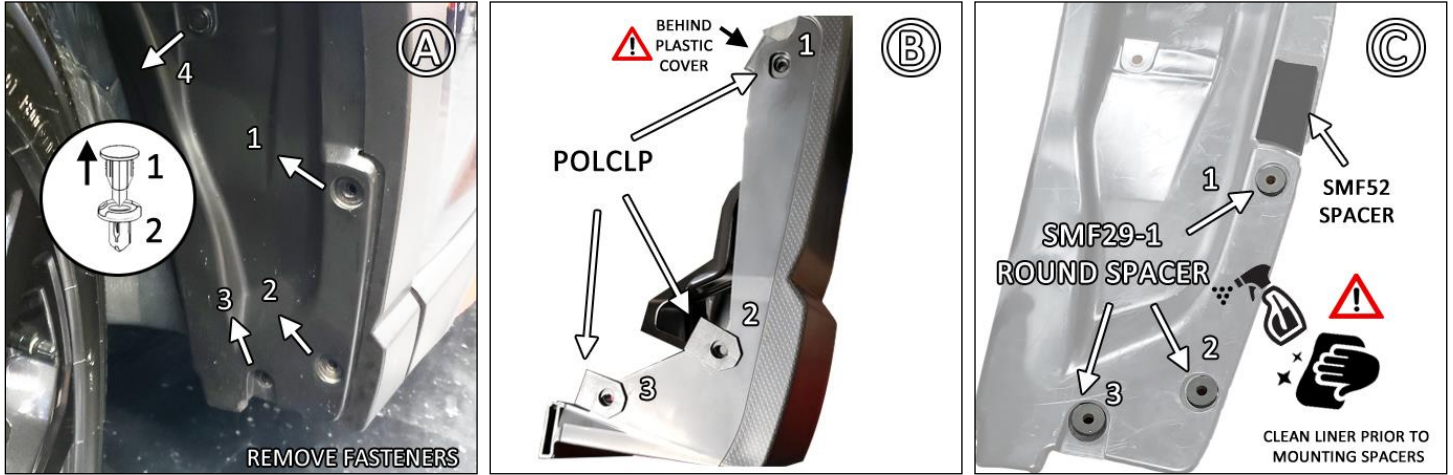

**FIGURE D** Gently contour BMF82-LF/RF to nest against wheel well. Logo-side of flap facing rear bumper, place bolt-side of BMF82-LF/RF through flap, facing tire.

**FIGURE E** Install SMWASH & 1.5SS into mounts 1 – 3 and SMWASH & SSLNUT onto mount 4.

**FIGURE F** Align flap before tightening fasteners until just seated.

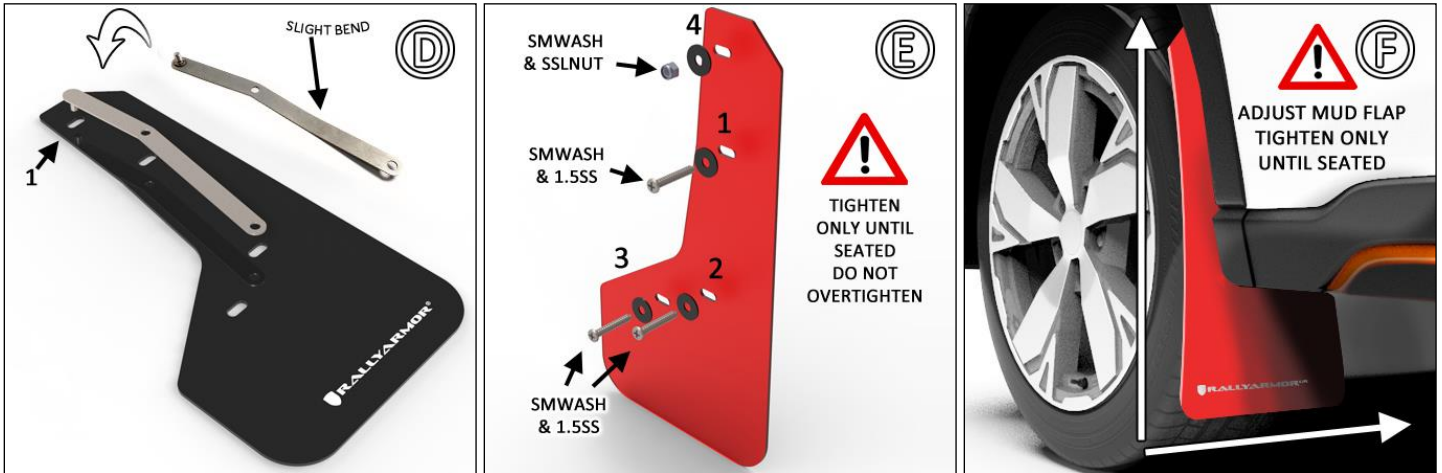


**REAR FLAP** 1 x Flap Bracket & Hardware → BMF52-LR/RR; 3 x 1SS; 1 x INS7; 2 x POLCLP; 4 x SMWASH; 1 x SSLNUT

**Avoid overtightening hardware.**

**FIGURE G/H** Remove OEM fastener located underneath bumper, then install INS7 in its place. Replace liner.

**FIGURE I** Place BMF52-LR/RR over bumper skin and INS7, then install SMWASH & 1SS. Tighten until bracket conforms to liner.


**2022+ SUBARU FORESTER & FORESTER WILDERNESS MUD FLAP INSTALLATION INSTRUCTIONS**

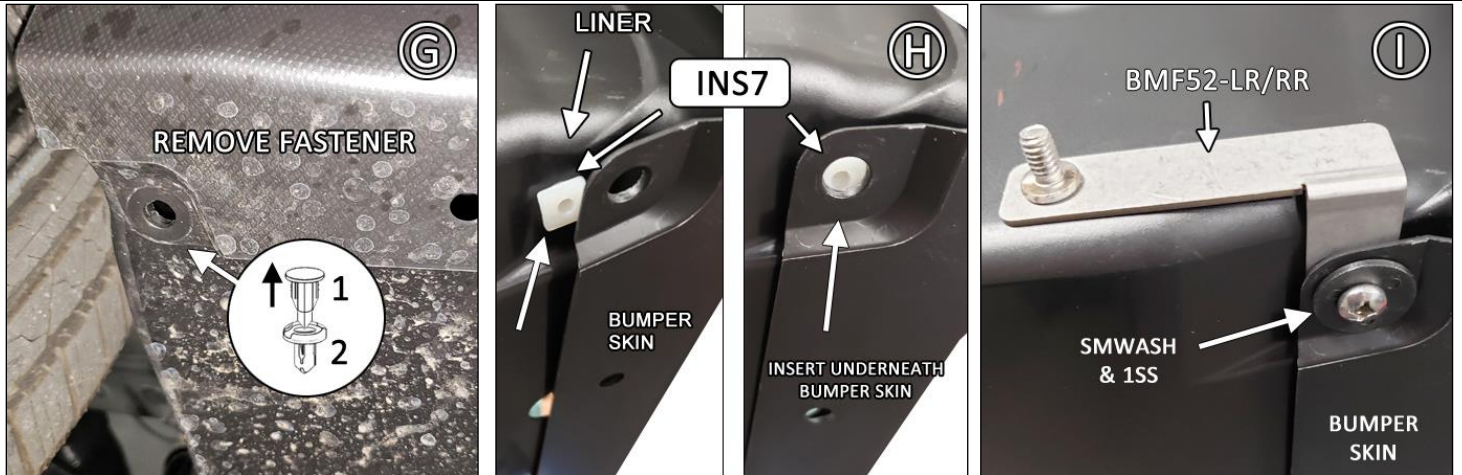

**FIGURE J** Install POLCLP into mounts 1 & 2.

**FIGURE K** Logo-side of flap facing rear bumper, install SMWASH & 1SS into mounts 1 & 2 and SMWASH & SSLNUT into mount 3


**FIGURE L** Align flap before tightening fasteners until just seated.

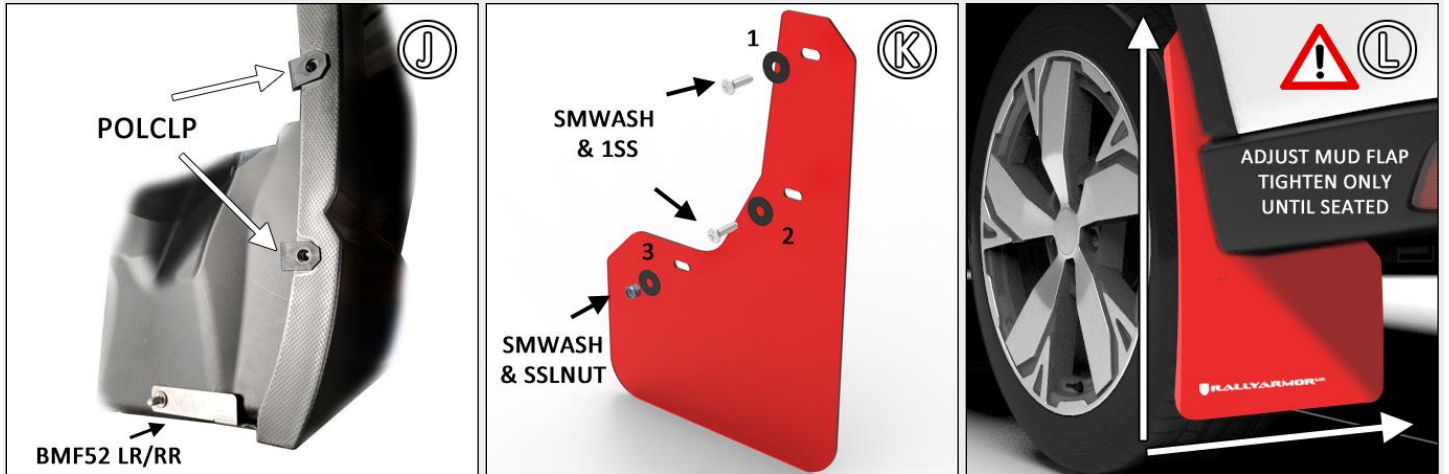

# IMF82



## 2022+ SUBARU FORESTER & FORESTER WILDERNESS MUD FLAP INSTALLATION INSTRUCTIONS

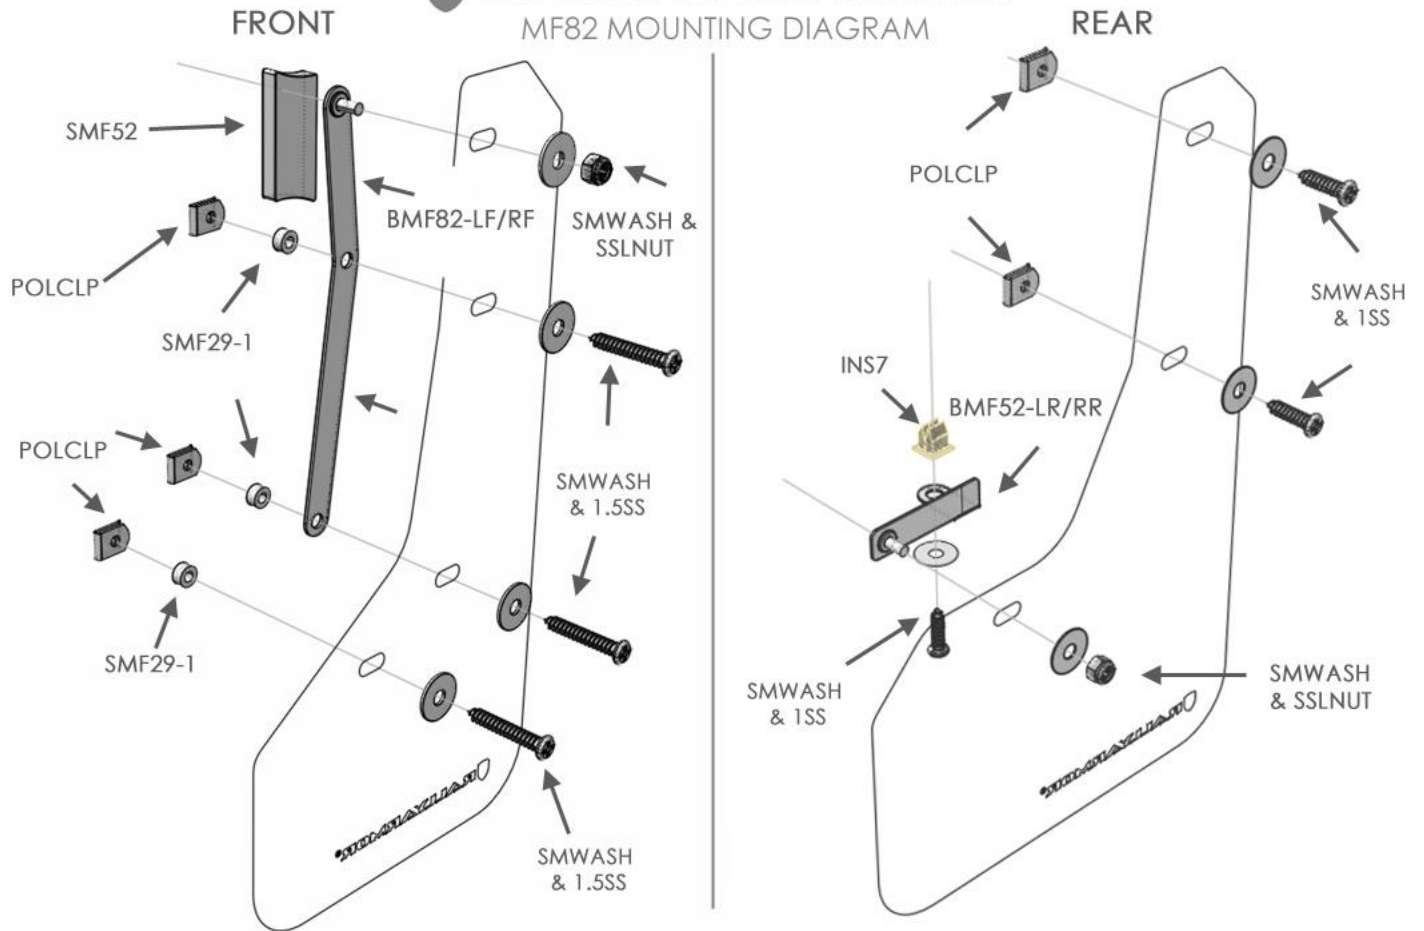

Content and images are copyright of Rally Armor® LLC