



## 2025+ Hyundai Tucson Hybrid HEV, N-Line Installation Instructions



**Manufacturer warranty covers material defects on new, never installed parts. Once installed, all mud flap replacement part costs are the responsibility of the vehicle owner.** Caution against blind spots during parking.














Avoid curbs and excessive compression to the flaps. Check stock and aftermarket wheel/suspension clearances.

**INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → [www.rallyarmor.com/support](http://www.rallyarmor.com/support)**

**Recommended Tools** Low-profile offset, ratcheting, flat & Phillips screwdrivers, pick, needle nose plier.

**ONLY install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE.**

**ABOUT OUR STANDARD** Polyurethane is a high grade plastic that may have superficial surface marks that don't affect flap construction or performance. Most matte away as the material ages.

CONFIRM PARTS & QUANTITIES BEFORE INSTALLATION		
MUD FLAP PN MF135 SEE PAGE 4	PART DESCRIPTION	QUANTITY
MF135-LF	LEFT FRONT	1
MF135-RF	RIGHT FRONT	1
MF135-LR	LEFT REAR	1
MF135-RR	RIGHT REAR	1
BRACKET PN BMF135		
BMF61-LF 	BRACKET LEFT FRONT	1
BMF61-RF 	BRACKET RIGHT FRONT	1
BMF63 	BRACKET REAR	2
BMF68-RE 	BRACKET REAR 2	2
HARDWARE PN HMF135		
1SS 	SCREW	4
INS5 	INSERT	2
POLCLP 	CLIP	4
SMF135-1 	SPACER LEFT REAR	1
SMF135-2 	SPACER RIGHT REAR	1
SMF75-L 	SPACER LEFT FRONT	1
SMF75-R 	SPACER RIGHT FRONT	1
SMWASH 	WASHER	10
SSLNUT 	LOCK NUT	6



## 2025+ Hyundai Tucson Hybrid HEV, N-Line Installation Instructions


**Do not fully tighten fasteners until flaps are aligned to vehicle.**

**FRONT FLAP** To access interior wheel well, turn steering wheel towards installation side.

**Parts for 1 Flap**→ BMF61-LF/RF; 2 x 1SS; 2 x POLCLP; 1 x SMF75-L/R; 4 x SMWASH; 2 x SSLNUT


**FIGURE A/B** Remove factory fasteners 1 & 2. Pull liner aside to install POLCLP over mounts 1 & 2. Reinstall liner.

**FIGURE C** Wipe area clean. Remove SMF75-L/R adhesive film. Attach to rocker panel curve.

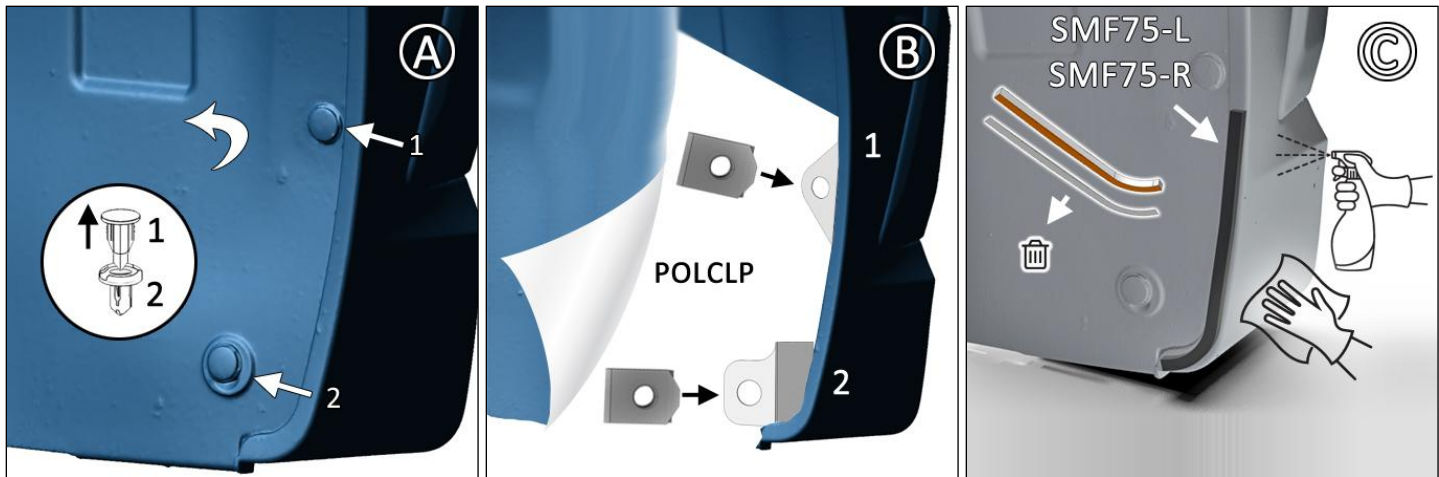

**FIGURE D/E** Position BMF61-LF/RF over logo-side of flap and both facing rear bumper. Install SMWASH & 1SS into mounts 1 & 2 and SMWASH & SSLNUT onto mounts 3 & 4.

**FIGURE F** Ensure flap is aligned to vehicle before tightening fasteners until just seated.

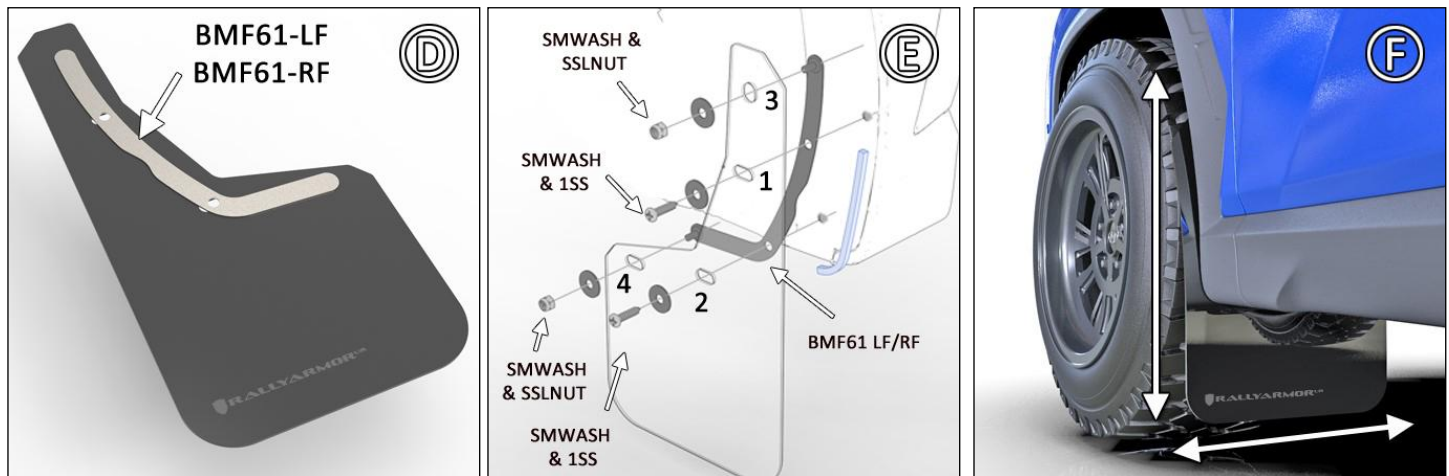


**REAR FLAP** **Parts for 1 Flap**→ 1 x BMF63; 1 x BMF68-RE; 1 x INS5; 1 x SMF135-1/2; 1 x SMWASH; 1 x SSLNUT

**FIGURE G/H** Temporarily remove factory fasteners 1 & 2. Remove underbody fastener 3.

**FIGURE I** Place stud-side of BMF68-RE facing tire. Install INS5 into BMF68-RE underbody mount 3.




## 2025+ Hyundai Tucson Hybrid HEV, N-Line Installation Instructions

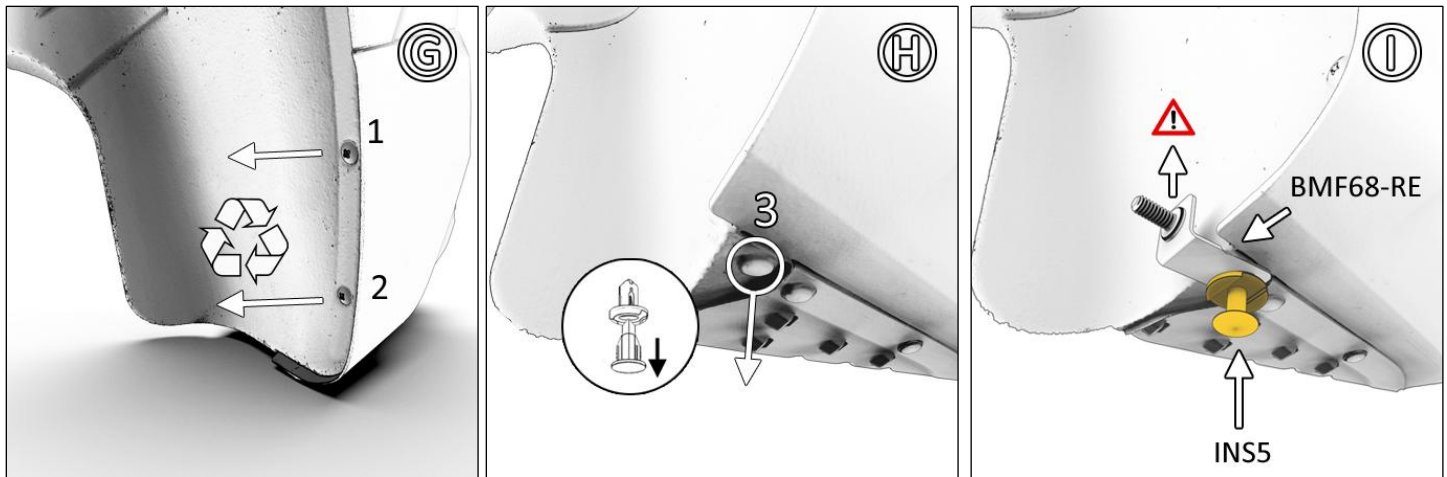

**FIGURE J** Wipe area clean. Remove SMF135-1/2 adhesive film. Attach onto liner, over mounts 1 & 2 and behind BMF68-RE stud.

**FIGURE K** Position logo-side of flap facing rear bumper, over SMF135-1/2. Place **BMF63 over flap side facing tire**. Reinstall factory fasteners into mounts 1 & 2. Install SMWASH & SSLNUT into mount 4.

**FIGURE L** Align flap to vehicle before tightening fasteners until just seated.

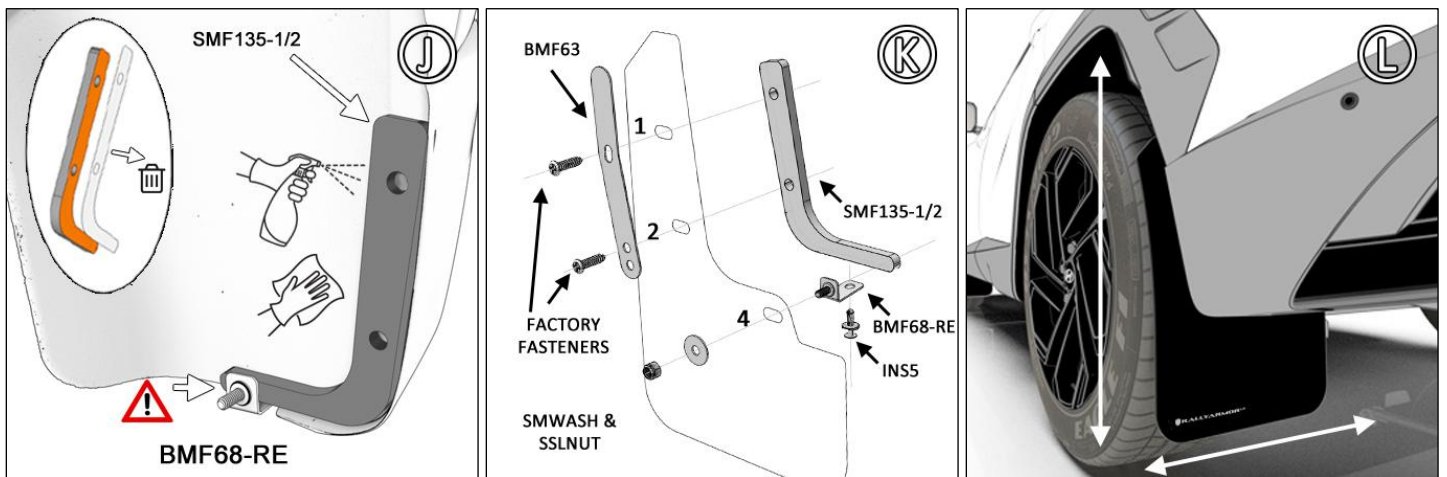



## 2025+ Hyundai Tucson Hybrid HEV, N-Line Installation Instructions

FRONT

MF135 MOUNTING DIAGRAM

REAR

