



2023+ Acura Integra Type S Mud Flap Installation Instructions



Manufacturer warranty covers material defects on new, never installed parts. Once installed, all replacement part costs are the responsibility of the vehicle owner. Caution against blind spots during parking. Avoid curbs & excessive compression to flaps. **Check/ensure for sufficient exhaust, wheel, suspension clearances.**

INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → www.rallyarmor.com/support

Recommended Tools Low-profile offset, ratcheting, flat & Phillips screwdrivers, pick, needle nose plier.

Install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE.

ABOUT OUR STANDARD IN MUD FLAPS Polyurethane is a high grade plastic that may feature minor surface layer marks. These are visual variations that don't affect flap construction or performance. Most matte away as the material ages.

CONFIRM ALL PARTS & QUANTITIES BEFORE INSTALLATION

MUD FLAP KIT PN MF129 SEE PAGE 4	PART DESCRIPTION	QUANTITY
MF129-LF	LEFT FRONT	1
MF129-RF	RIGHT FRONT	1
MF129-LR	LEFT REAR	1
MF129-RR	RIGHT REAR	1
BRACKET PN BMF129		
BMF109-LR 	BRACKET LEFT REAR	1
BMF109-RR 	BRACKET RIGHT REAR	1
HARDWARE KIT PN HMF129		
1SP 	SPACER	2
1SS 	SCREW	10
2SS 	LONG SCREW	2
BLKNUT 	NUT	4
HXBLT 	BOLT	4
INS7 	INSERT	10
SMF29-1 	FOAM SPACER	2
SMWASH 	WASHER	18



2023+ Acura Integra Type S Mud Flap Installation Instructions

Do not fully tighten fasteners until flap is completely aligned to vehicle.

FRONT FLAP Parts 1 Flap → 1 x 1SP; 2 x 1SS; 1 x 2SS; 4 x SMWASH; OPTIONAL 2 x INS7

To access interior wheel well, turn steering wheel towards installation side.

FIGURE A If equipped with factory splash guards, remove guards and screws 1 – 4.

FIGURE B For vehicles without factory splash guards and fasteners 1 & 2 do not exist, install INS7 into mounts 1 & 2. If factory fasteners do exist, temporarily remove.

FIGURE C Place 1SP over liner mount 4.


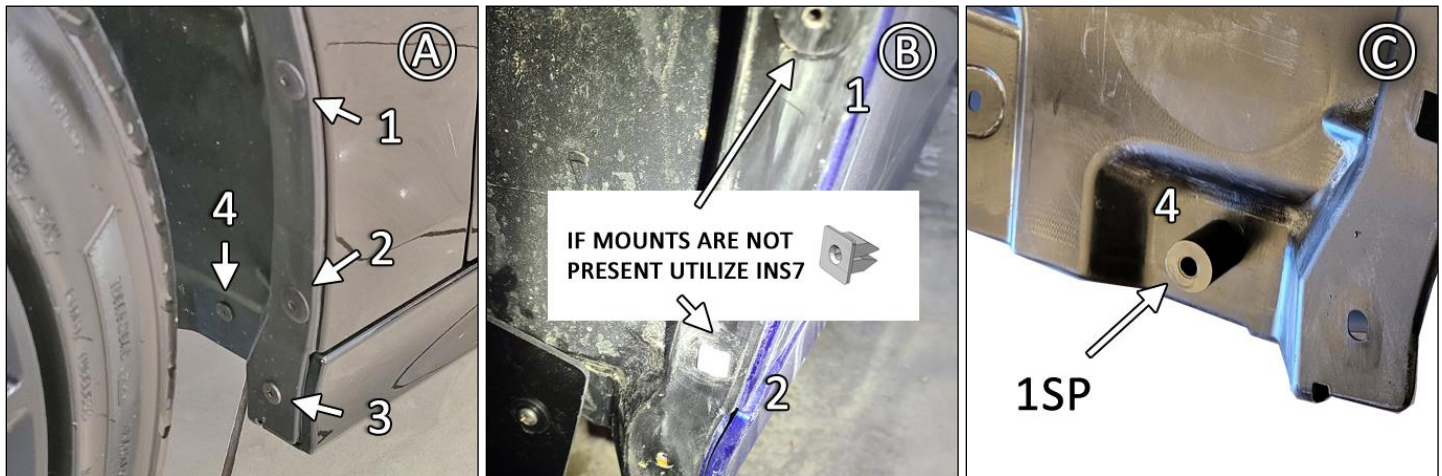


FIGURE D Position logo-side of flap facing rear bumper. Install SMWASH & 2SS into mount 4 & 1SP. Fasten SMWASH & 1SS into mounts 1 & 2 and SMWASH & factory screw into mount 3.

FIGURE E/F Check clearance between tire & flap. Align flaps to vehicle before tightening fasteners until washers just seat against flap.



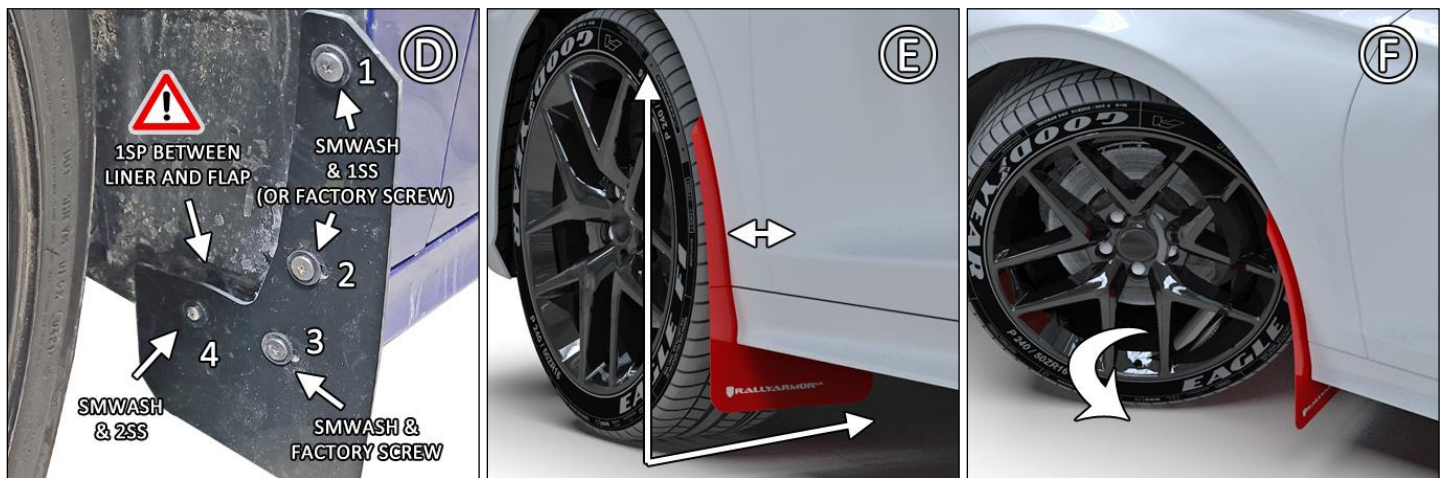

2023+ Acura Integra Type S Mud Flap Installation Instructions

REAR FLAP Parts 1 Flap → BMF109-LR/RR; 3 x 1SS; 2 x BLKNUT; 2 x HXBLT; 3 x INS7; 1 x SMF29-1; 5 x SMWASH

FIGURE G/H Temporarily remove factory screw 1 and underbody screw 6.

FIGURE I Press INS7 into BMF109-LR/RR mounts 3 - 5. Use needle nose plier to compress INS7 stems and seat flush.

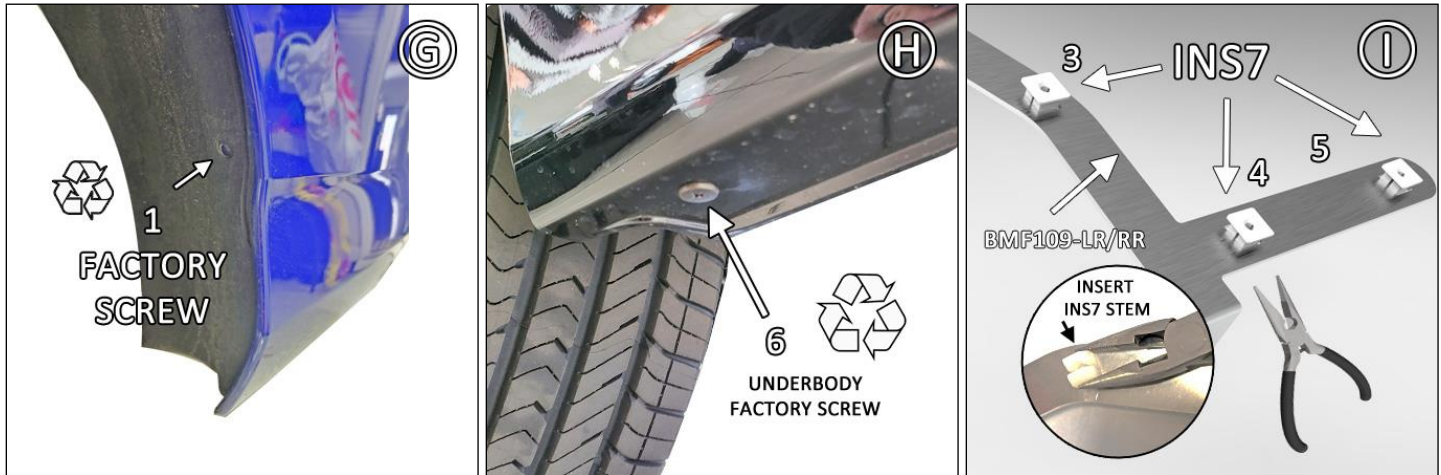


FIGURE J Adhere SMF29-1 over BMF109-LR/RR mount 6. Place HXBLT through mounts 1 & 2.

FIGURE K/L Install BMF109-LR/RR between bumper & liner. Reinstall factory screw into mount 6. Install factory screw into mount 1.


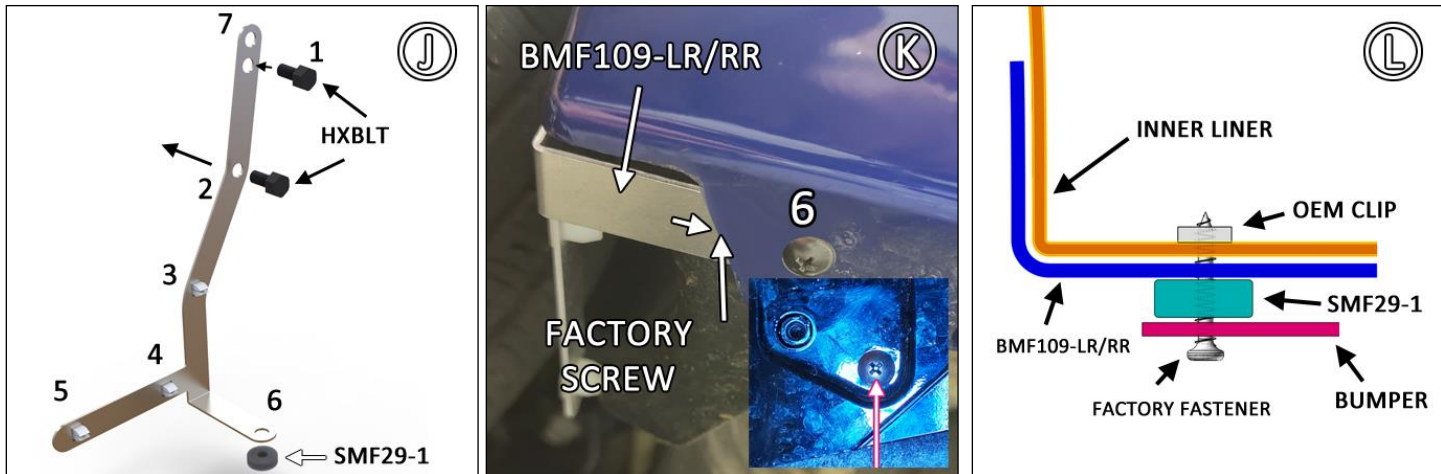


FIGURE M/N Subtly curve BMF109-LR/RR, so it contours against bumper. Install factory screw into mount 7. Place logo-side of flap against BMF109-LR/RR. Install SMWASH & BLKNUT onto mounts 1 & 2. Install SMWASH & 1SS into mounts 3 - 5.

FIGURE O Align flaps to vehicle before tightening fasteners until washers just seat to flap.



2023+ Acura Integra Type S Mud Flap Installation Instructions

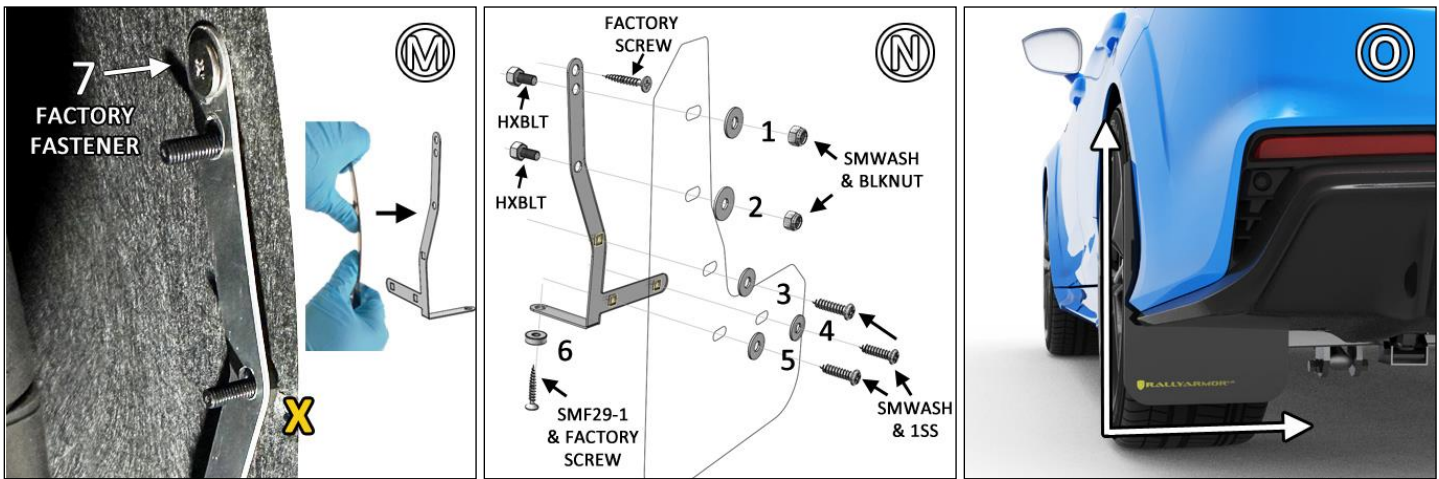

FRONT

MF129 MOUNTING DIAGRAM

REAR

