



2025+ Hyundai Tucson Hybrid HEV, N-Line Installation Instructions



Manufacturer warranty covers material defects on new, never installed parts. Once installed, all mud flap replacement part costs are the responsibility of the vehicle owner. Caution against blind spots during parking.



Avoid curbs and excessive compression to the flaps. Check stock and aftermarket wheel/suspension clearances.

INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → www.rallyarmor.com/support

Recommended Tools Low-profile offset, ratcheting, flat & Phillips screwdrivers, pick, needle nose plier.

ONLY install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE.

ABOUT OUR STANDARD Polyurethane is a high grade plastic that may have superficial surface marks that don't affect flap construction or performance. Most matte away as the material ages.

CONFIRM PARTS & QUANTITIES BEFORE INSTALLATION		N7H46AK300 & N7H46AK400	
MUD FLAP PN MF135 SEE PAGE 4		PART DESCRIPTION	QUANTITY
MF135-LF		LEFT FRONT	1
MF135-RF		RIGHT FRONT	1
MF135-LR		LEFT REAR	1
MF135-RR		RIGHT REAR	1
BRACKET PN BMF135			
BMF61-LF		BRACKET LEFT FRONT	1
BMF61-RF		BRACKET RIGHT FRONT	1
BMF63		BRACKET REAR	2
BMF68-RE		BRACKET REAR 2	2
HARDWARE PN HMF135			
1SS		SCREW	4
INS5		INSERT	2
POLCLP		CLIP	4
SMF135-1		SPACER LEFT REAR	1
SMF135-2		SPACER RIGHT REAR	1
SMF75-L		SPACER LEFT FRONT	1
SMF75-R		SPACER RIGHT FRONT	1
SMWASH		WASHER	10
SSLNUT		LOCK NUT	6



2025+ Hyundai Tucson Hybrid HEV, N-Line Installation Instructions

Do not fully tighten fasteners until flaps are aligned to vehicle.

FRONT FLAP To access interior wheel well, turn steering wheel towards installation side.

Parts for 1 Flap→ BMF61-LF/RF; 2 x 1SS; 2 x POLCLP; 1 x SMF75-L/R; 4 x SMWASH; 2 x SSLNUT

FIGURE A/B Remove factory fasteners 1 & 2. Pull liner aside to install POLCLP over mounts 1 & 2. Reinstall liner.

FIGURE C Wipe area clean. Remove SMF75-L/R adhesive film. Attach to rocker panel curve.


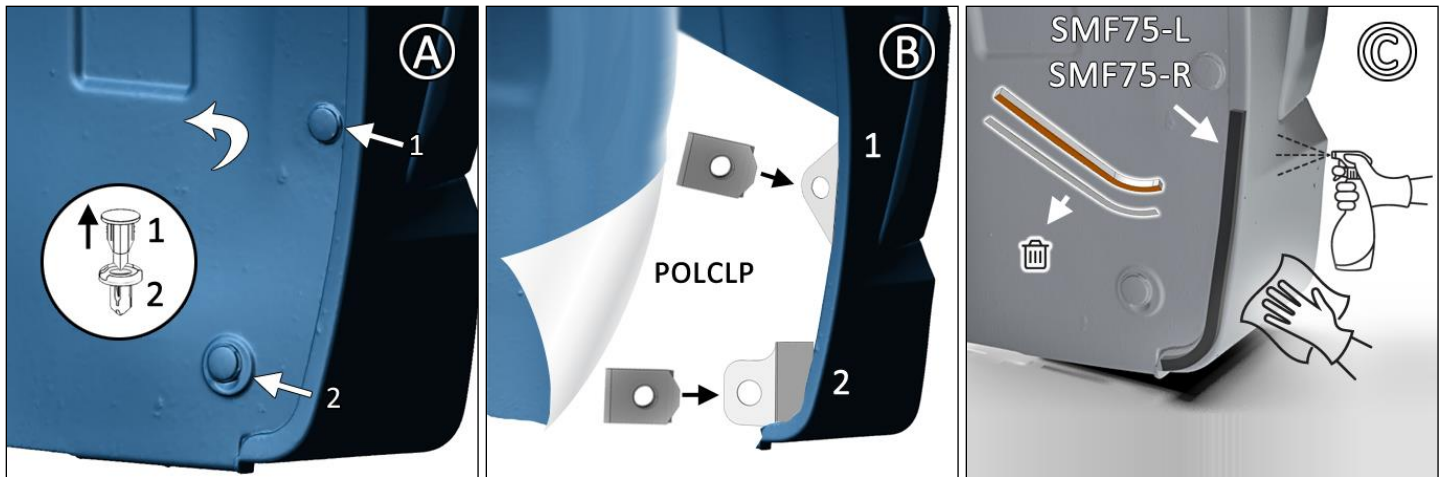


FIGURE D/E Position BMF61-LF/RF over logo-side of flap and both facing rear bumper. Install SMWASH & 1SS into mounts 1 & 2 and SMWASH & SSLNUT onto mounts 3 & 4.

FIGURE F Ensure flap is aligned to vehicle before tightening fasteners until just seated.

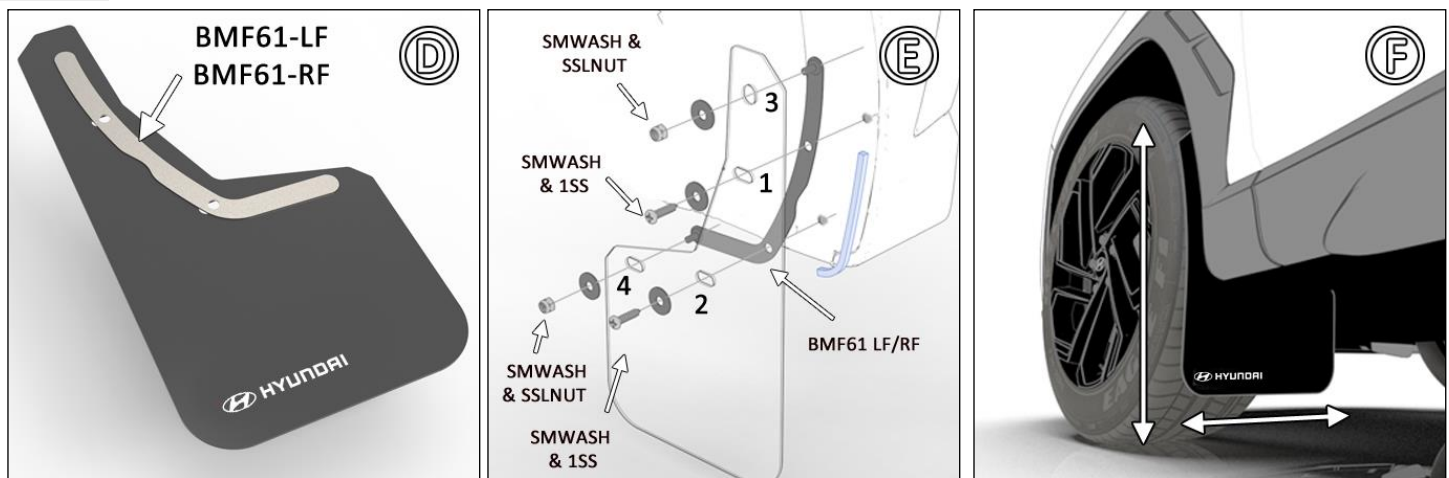

REAR FLAP **Parts for 1 Flap**→ 1 x BMF63; 1 x BMF68-RE; 1 x INS5; 1 x SMF135-1/2; 1 x SMWASH; 1 x SSLNUT

FIGURE G/H Temporarily remove factory fasteners 1 & 2. Remove underbody fastener 3.

FIGURE I Place stud-side of BMF68-RE facing tire. Install INS5 into BMF68-RE underbody mount 3.



2025+ Hyundai Tucson Hybrid HEV, N-Line Installation Instructions


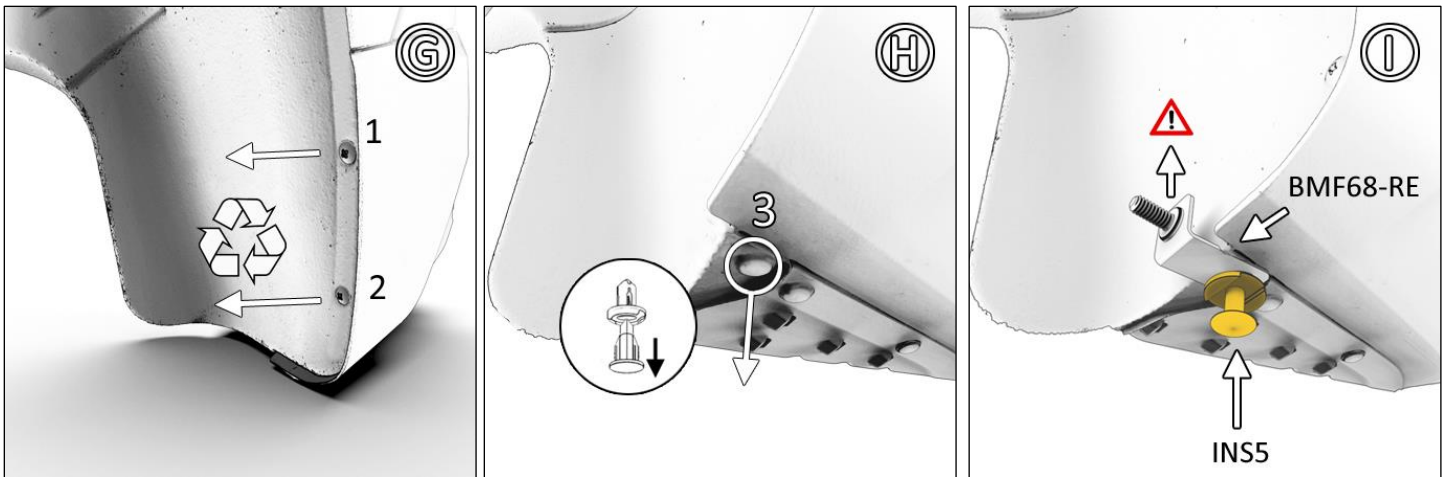


FIGURE J Wipe area clean. Remove SMF135-1/2 adhesive film. Attach onto liner, over mounts 1 & 2 and behind BMF68-RE stud.

FIGURE K Position logo-side of flap facing rear bumper, over SMF135-1/2. Place **BMF63 over flap side facing tire**. Reinstall factory fasteners into mounts 1 & 2. Install SMWASH & SSLNUT into mount 4.

FIGURE L Align flap to vehicle before tightening fasteners until just seated.



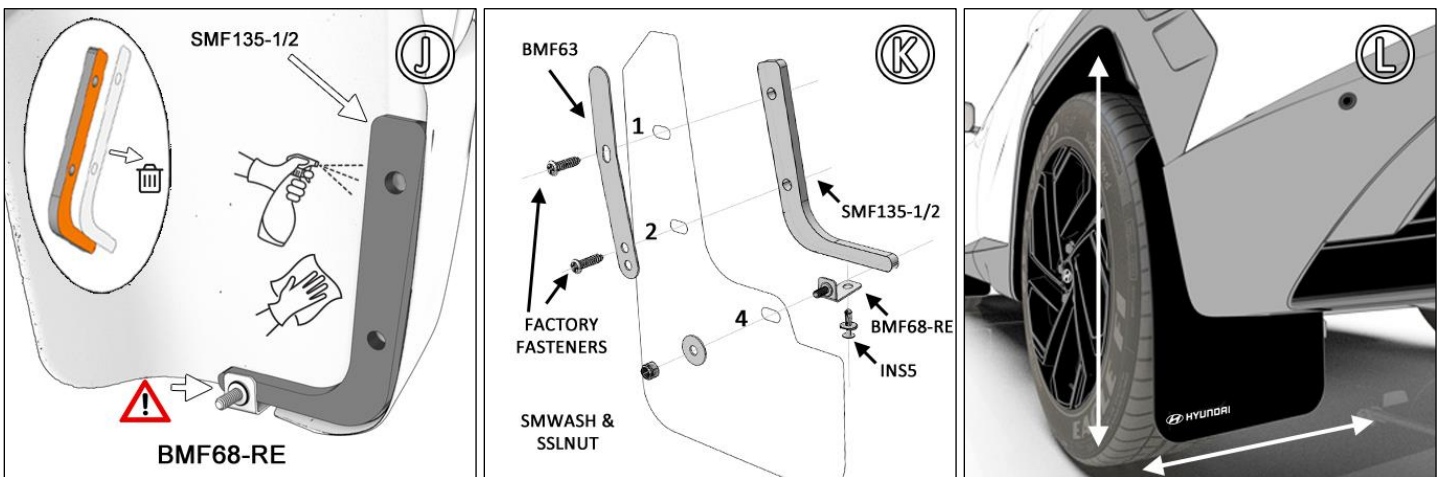

2025+ Hyundai Tucson Hybrid HEV, N-Line Installation Instructions

FRONT

MF135 MOUNTING DIAGRAM

REAR

