



2026+ Subaru Outback Installation Instructions



Manufacturer warranty covers material defects on new, never installed parts. Once installed, customer is responsible for all replacement part costs. Caution against blind spots during parking. Avoid curbs and excessive compression to flaps. **Check for sufficient exhaust, wheel, suspension clearances.**


INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → www.rallyarmor.com/support

Recommended Tools 7mm/10mm/11mm wrench, isopropyl alcohol, Phillips screwdriver, pick, utility razor.

Install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE.

ABOUT OUR STANDARD IN MUD FLAPS Polyurethane is a high grade plastic that may feature minor surface layer marks.

These are visual variations that don't affect flap construction or performance. Most matte away as the material ages.

CONFIRM PARTS & QUANTITIES BEFORE INSTALLATION		
MUD FLAP KIT PN MF136 SEE PAGE 4	PART DESCRIPTION	QUANTITY
MF136-LF	LEFT FRONT	1
MF136-RF	RIGHT FRONT	1
MF136-LR	LEFT REAR	1
MF136-RR	RIGHT REAR	1
BRACKET KIT PN BMF136		
BMF57-LR 	BRACKET LEFT REAR	1
BMF57-RR 	BRACKET RIGHT REAR	1
HARDWARE KIT PN HMF136		
.25SP 	SPACER	4
1SS 	SCREW	2
1.5SS 	LONG SCREW	6
1SS#8 	THIN SCREW	2
EXPANCH 	EXPANSION ANCHOR	2
INS5 	FASTENER	4
POLCLP 	CLIP	6
SMF29-1 	FOAM SPACER	4
SMWASH 	WASHER	12
SSLNUT 	LOCK NUT	2



2026+ Subaru Outback Installation Instructions

Do not fully tighten fasteners until flaps are aligned to vehicle.

FRONT FLAP Access interior wheel well by turning steering wheel towards the installation side.

Parts x 1 Flap → 2 x .25SP; 3 x 1.5SS; 1 x INS5; 2 x POLCLP; 1 x SMF29-1; 3 x SMWASH

IMAGE A Remove factory fasteners 1 - 3. Temporarily remove lower fastener. Move liner aside.

IMAGE B Place POLCLP over mounts 1 & 2.

IMAGE C Remove/discard stem of INS5. Install base into mount 3. Replace liner and reinstall lower fastener.


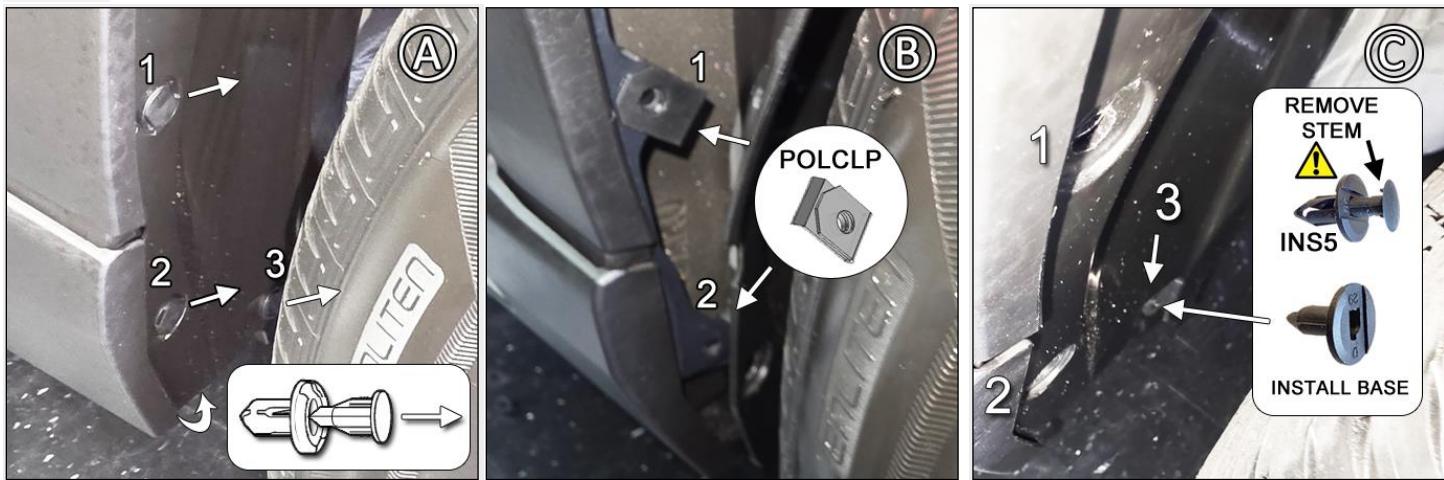


IMAGE D To remove SMF29-1 adhesive film, use a bit of isopropyl alcohol to soak film lightly and peel away using tip of utility blade. Adhere SMF29-1 onto mount 3, over INS5 base.

IMAGE E Position logo-side of flap facing rear bumper. Place .25SP **BEHIND** flap mounts 1 & 2. Install SMWASH & 1.5SS into mounts 1 - 3.

IMAGE F Align flap to even ground before tightening fasteners until just seated.



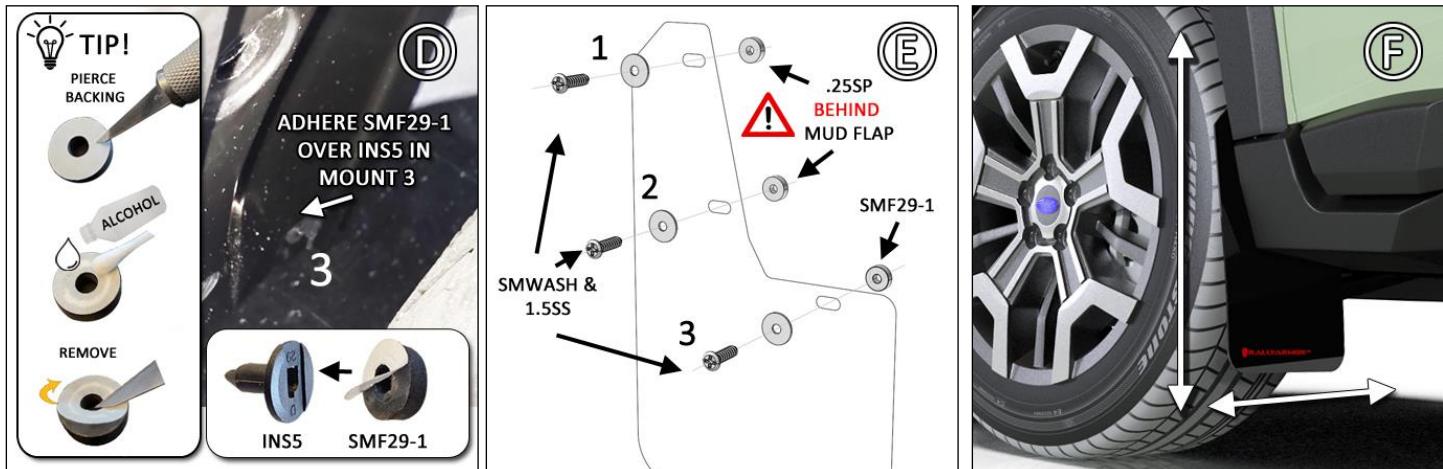

2026+ Subaru Outback Installation Instructions

REAR FLAP Parts x 1 Flap → BMF57-LR/RR; 1 x 1SS; 1 x 1SS#8; 1 x EXPANCH; 1 x INS5; 1 x POLCLP; 1 x SMF29-1; 3 x

SMWASH; 1 x SSLNUT

IMAGE G Remove fastener 1. Note mount 2. Remove underbody factory fastener 3.

IMAGES H/I Install EXPANCH into mount 3. Use pick to expand EXPANCH, then adhere SMF29-1 over it.


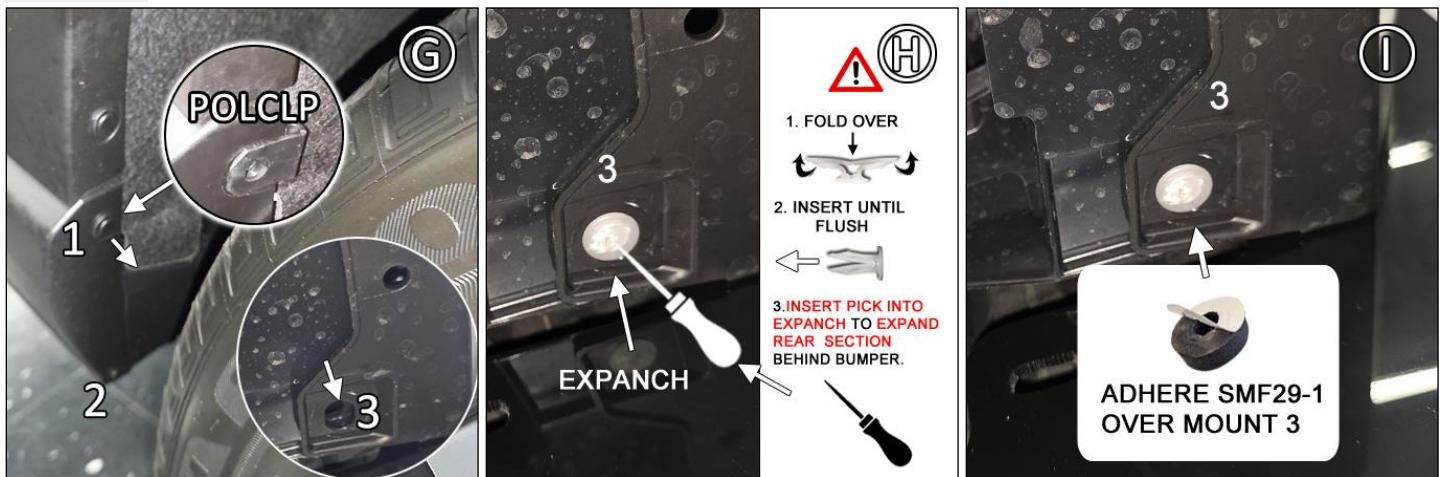


IMAGE J Place stud-side of BMF57-LR/RR facing tire and over underbody mount 3. Install SMWASH & 1SS#8 into BMF57-LR/RR mount 3.

IMAGE K Position logo-side of flap facing rear bumper. Install SMWASH & 1SS into mount 1 and SMWASH & SSLNUT onto mount 4. Last, install INS5 into mount 2 and lock inner fastener in place.

IMAGE L Align flap to even ground before tightening fasteners until just seated.



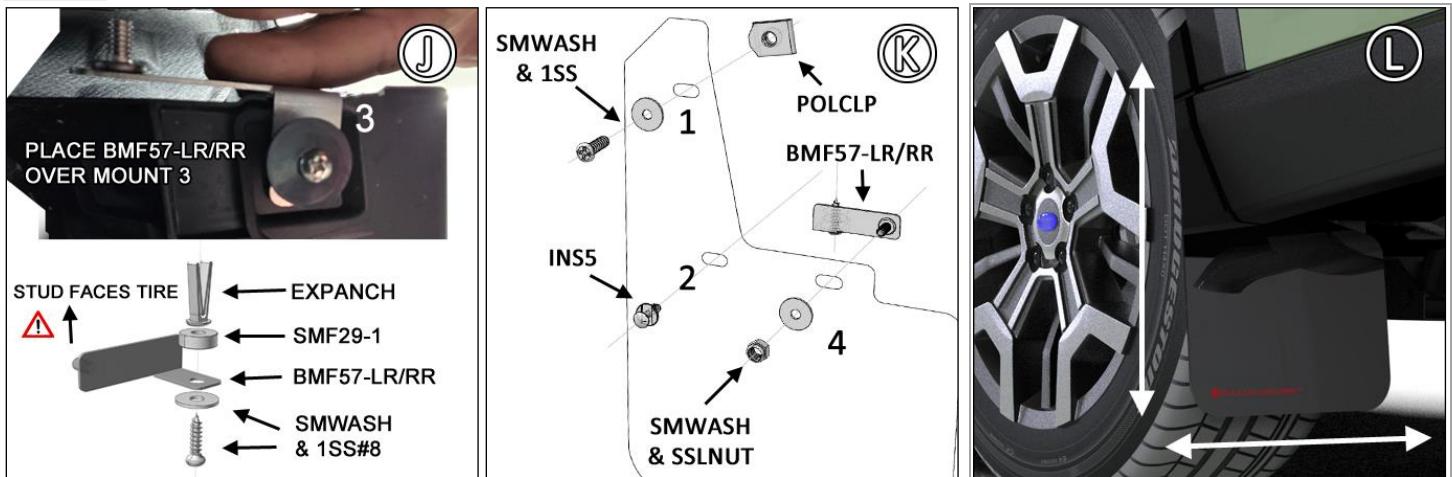

2026+ Subaru Outback Installation Instructions

