IMF137



2025+ Hyundai Ioniq 5 Installation Instructions

Manufacturer warranty covers material defects on new, never installed parts. Once installed, all replacement part costs are the responsibility of the vehicle owner. Caution against blind spots during parking. Avoid curbs & excessive compression to flaps. Check/ensure for sufficient exhaust, wheel, suspension clearances. INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → www.rallyarmor.com/support Recommended Tools Low profile ratcheting screwdriver, 7/16" wrench, Flathead screwdriver. Install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE. ABOUT OUR STANDARD IN MUD FLAPS Polyurethane is a high grade plastic that may feature minor surface layer marks. These are visual variations that don't affect flap construction or performance. Most matte away as the material ages.

CONFIRM ALL PARTS & QUANTITIES BEFORE INSTALLATION			
MUD FLAP PN MF137 SEE PAGE 4	PART DESCRIPTION	QUANTITY	
MF137-LF	LEFT FRONT	1	
MF137-RF	RIGHT FRONT	1	
MF137-LR	LEFT REAR	1	
MF137-RR	RIGHT REAR	1	
BRACKET PN BMF137			
BMF87-LF	BRACKET LEFT FRONT	1	
BMF87-RF	BRACKET RIGHT FRONT	1	
BMF87-LR	BRACKET LEFT REAR	1	
BMF87-RR	BRACKET RIGHT REAR	1	
HARDWARE PN HMF137			
.25SP	SPACER	6	
1.5SS	SCREW	10	
POLCLP	CLIP	4	
SMF29-2A	FOAM SPACER 2	2	
SMF29-3	FOAM SPACER 3	2	
SMWASH	WASHER	16	
SSLNUT	LOCK NUT	6	

1



2025+ Hyundai Ioniq 5 Installation Instructions

HARDWARE for LIMITED MODELS ONLY		
SMF29-1	FOAM SPACER	2
UNUT2	FLAT CLIP	2

Do not fully tighten fasteners until flap is completely aligned to vehicle.

FRONT FLAP To access interior wheel well, turn steering wheel towards installation side.

Parts 1 Flap \rightarrow 1 x BMF87-LF/RF; 2 x 1.5SS; 2 x POLCLP; 1 x SMF29-2A; 4 x SMWASH; 2 x SSLNUT

FIGURE A Remove factory fasteners 1 & 2. Pull liner away.

FIGURE B Install POLCLP over mounts 1 & 2. Reinstall liner.

FIGURE C Affix SMF29-2A to bottom of BMF87-LF/RF, then curve about 3mm, just until SMF29-2A nests against liner.


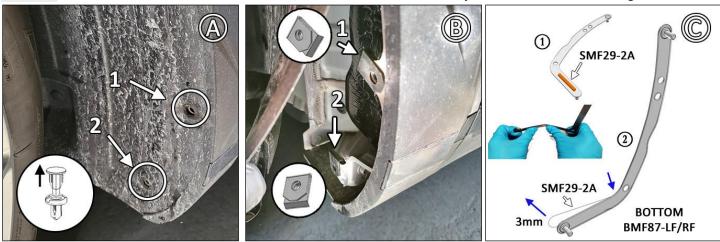


FIGURE D/E Position BMF87-LF/RF behind flap, over logo-side of flap. Place assembly over liner, facing rear bumper. Install SMWASH & 1.5SS into mounts 2 & 4 and SMWASH & SSLNUT onto mounts 1 & 3. If SMF29-2A isn't contoured flush against liner, repeat Figure C.

FIGURE F Align flap to vehicle before tightening fasteners until washers just seat against flap.





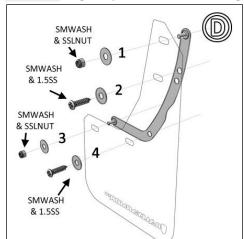



2025+ Hyundai Ioniq 5 Installation Instructions

REAR FLAP Parts 1 Flap→ 1 x BMF87-LR/RR; 3 x .25SP; 3 x 1.5SS; 1 x SMF29-3; 4 x SMWASH; 1 x SSLNUT

2025+ LIMITED MODELS ONLY: 1 x UNUT2; 1 x SMF29-1

FIGURE G Remove factory fasteners 1 - 3.

FIGURE H Adhere SMF29-3 to long leg of BMF87-LR/RR.

FIGURE I Temporarily remove under bumper factory fastener 5. Place short leg of BMF87-LR/RR over mount 5, then reinstall fastener.




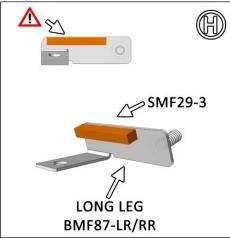




FIGURE J Place logo-side of flap facing rear bumper. Place .25SP behind flap, over liner mounts 1 – 3. Install SMWASH & 1.5SS into mounts 1 – 3 and SMWASH & SSLNUT onto mount 4. **For mount 1 on LIMITED MODELS, see Figure K. FIGURE K** For **LIMITED MODELS**, locate mount 1 behind liner. Install UNUT2. Adhere SMF29-1 to .25SP, place behind flap, over UNUT2. Install SMWASH & 1.5SS into mount 1.

FIGURE L Align flap to vehicle before tightening fasteners until washers just seat against flap.



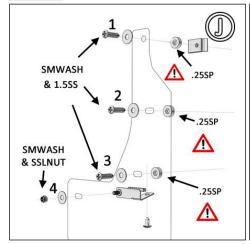



IMF137



2025+ Hyundai Ioniq 5 Installation Instructions

