

# IMF141



## 2023+ Chevy Colorado ZR2 Installation Instructions












**Manufacturer warranty covers material defects on new, never installed parts. Once installed, all replacement part costs are the responsibility of the vehicle owner.** Caution against blind spots during parking. Avoid curbs and excessive compression to flaps. **Check for sufficient exhaust, wheel, suspension clearances.**

**INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → [www.rallyarmor.com/support](http://www.rallyarmor.com/support)**

**Recommended Tools** 10mm/11mm wrench, Phillips screwdriver, Pick.

**Install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE.**

**ABOUT OUR STANDARD IN MUD FLAPS** Polyurethane is a high grade plastic that may feature minor surface layer marks. These are visual variations that don't affect flap construction or performance. Most matte away as the material ages.

CONFIRM PARTS & QUANTITIES BEFORE INSTALLATION		
MUD FLAP KIT PN MF141 SEE PAGE 3	PART DESCRIPTION	QUANTITY
MF141-LF	LEFT FRONT	1
MF141-RF	RIGHT FRONT	1
MF141-RE-TOP	REAR TOP	2
MF85-LF-BOT 	LEFT REAR BOTTOM	1
MF85-RF-BOT 	RIGHT REAR BOTTOM	1
BRACKET KIT PN BMF141		
BMF141 	BRACKET FRONT	2
HARDWARE KIT PN HMF141		
.5SP 	SPACER	2
1.5SS6TR 	SCREW	4
BLKNUT 	NUT	16
HXBLT 	BOLT	16
RACLP 	CLIP	4
SMWASH 	WASHER	36

**Do not fully tighten fasteners until flaps are aligned to vehicle.**

**FRONT FLAP** Access interior wheel well by turning steering wheel towards the installation side.

**Parts x 1 Flap → 1 x BMF141; 1 x .5SP; 2 x 1.5SS6TR; 4 x BLKNUT; 4 x HXBLT; 1 x RACLP; 10 x SMWASH**

# IMF141




## 2023+ Chevy Colorado ZR2 Installation Instructions

**IMAGE A** If equipped, remove factory splash guards. Remove fasteners 1 & 2. Clean mounting area.


**IMAGE B** Gently curve, not bend, corner of BMF141 towards rear of vehicle. Repeat as needed so flap contours to vehicle.

**IMAGE C** Assemble BMF141 to MF141-LF/RF with SMWASH & HXBLT on logo-side and SMWASH & BLKNUT on tire-side mounts 3 - 6.

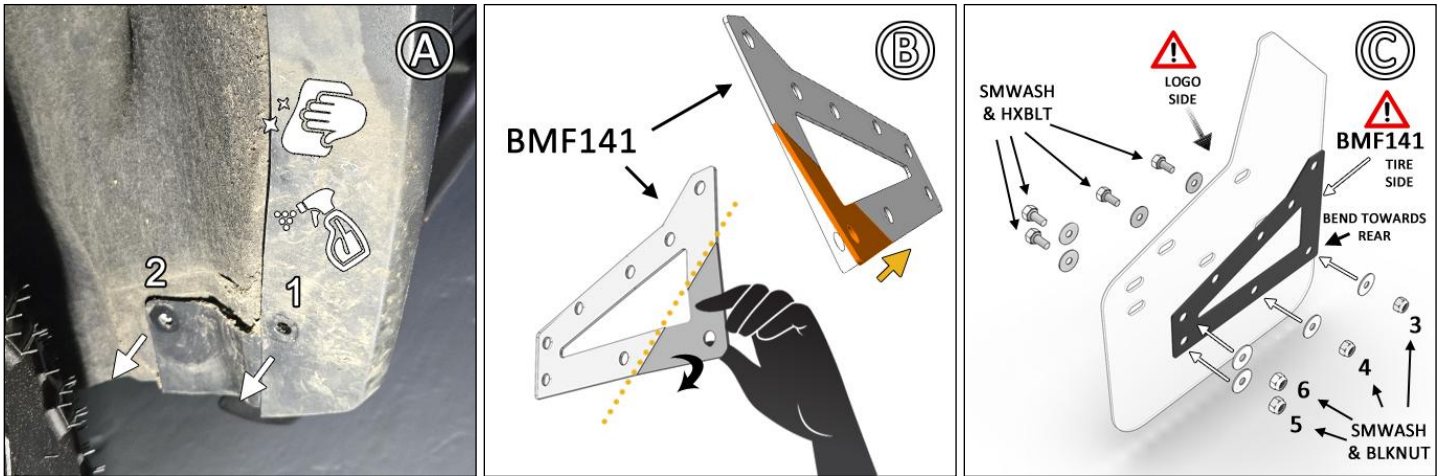

**IMAGE D/E** Place logo-side of flap facing rear bumper. Install SMWASH & 1.5SS6TR into mounts 1 & 2. 5SP mounts behind flap mount 2. Align flap to vehicle before tightening fasteners.

**IMAGE F** Clip RACLIP over top end of flap and fender flare.

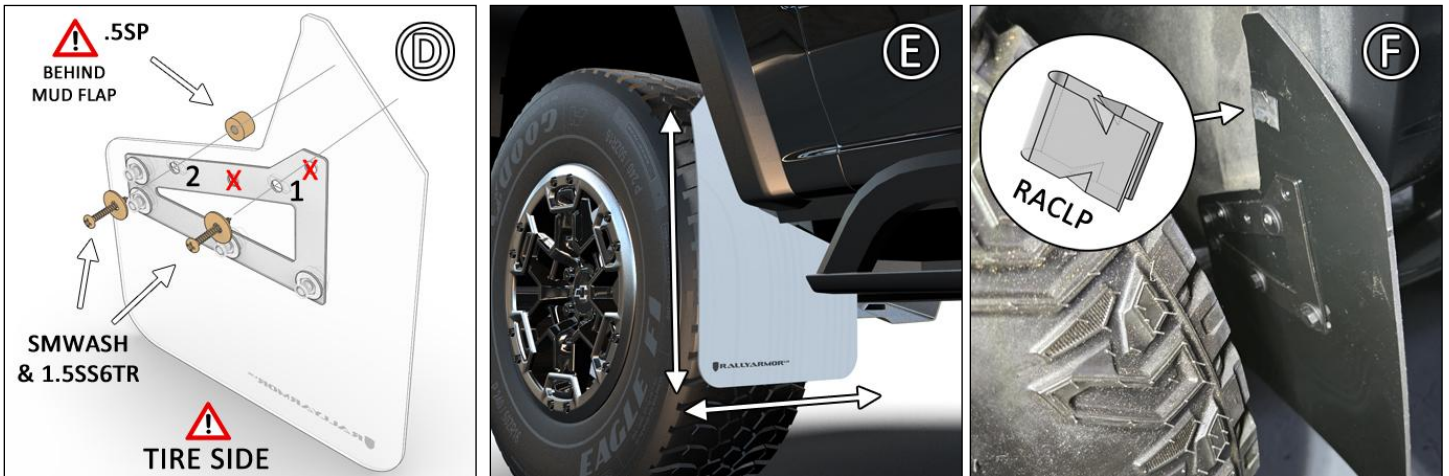

### REAR FLAP **Parts x 1 Flap** → 4 x BLKNUT; 4 x HXBLT; 1 x RACLIP; 8 x SMWASH

**IMAGE G** If equipped, remove factory splash guards. Temporarily uninstall/retain fasteners 1 - 3.

**IMAGE H** Assemble MF141-RE-TOP & MF85-LF/RF-BOT flap using SMWASH & HXBLT on logo-side and SMWASH & BLKNUT on tire-side.

**IMAGE I** Reinstall factory fasteners through mounts 1 - 3. Align flap. Install RACLIP over top portion MF141-RE-TOP and fender flare.



**2023+ Chevy Colorado ZR2 Installation Instructions**

