



2023+ Honda CR-V Installation Instructions



Manufacturer warranty covers material defects on new, never installed parts. Once installed, customer is responsible for all replacement part costs. Caution against blind spots during parking. Avoid curbs and excessive compression to flaps. **Check for sufficient exhaust, wheel, suspension clearances.**

INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → www.rallyarmor.com/support

Recommended Tools 7mm/10mm/11mm wrench, drill & 3mm or 1/8 bit, isopropyl alcohol, Phillips screwdriver, pick, utility razor.

Install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE.

ABOUT OUR STANDARD IN MUD FLAPS Polyurethane is a high grade plastic that may feature minor surface layer marks.

These are visual variations that don't affect flap construction or performance. Most matte away as the material ages.

CONFIRM PARTS & QUANTITIES BEFORE INSTALLATION

MUD FLAP KIT PN MF149 SEE PAGE 4	PART DESCRIPTION	QUANTITY
MF149-LF	LEFT FRONT	1
MF149-RF	RIGHT FRONT	1
MF149-LR	LEFT REAR	1
MF149-RR	RIGHT REAR	1
BRACKET KIT PN BMF149		
BMF149 	BRACKET REAR	2
BMF80-RE-M 	BRACKET REAR 2	2
HARDWARE KIT PN HMF149		
.5SP 	SPACER	2
.75SP 	LONG SPACER	2
1.5SS#8 	SCREW	8
BLKNUT 	NUT	2
HXBLT 	BOLT	2
ORCLP 	CLIP	4
SMF29-1 	FOAM SPACER	2
SMWASH 	WASHER	14
SSLNUT 	LOCK NUT	2



2023+ Honda CR-V Installation Instructions

Do not fully tighten fasteners until flaps are aligned to vehicle.

FRONT FLAP Access interior wheel well by turning steering wheel towards the installation side.

Parts x 1 Flap → 1 x .5SP; 1 x .75SP; 3 x 1.5SS#8; 1 x ORCLP; 1 x SMF29-1; 4 x SMWASH

IMAGE A Remove factory fasteners 1 - 4. Move liner aside.

IMAGE B Place ORCLP over mount 2. Replace liner.


IMAGE C Use tip of utility blade to remove adhesive film from SMF29-1. Start towards center.



IMAGE D Adhere SMF29-1 on liner mount 1.

IMAGE E Position logo-side of flap facing rear bumper. Install SMWASH & factory fastener into mount 1 and SMWASH & 1.5SS#8 into mount 2. Install SMWASH & 1.5SS#8 into mount 3 and .5SP onto reverse side of mount 3, **behind** flap. Install SMWASH & 1.5#8SS into mount 4 and .75SP onto reverse side of liner mount 4, **behind** flap.

IMAGE F Align flap to even ground before tightening fasteners until just seated.

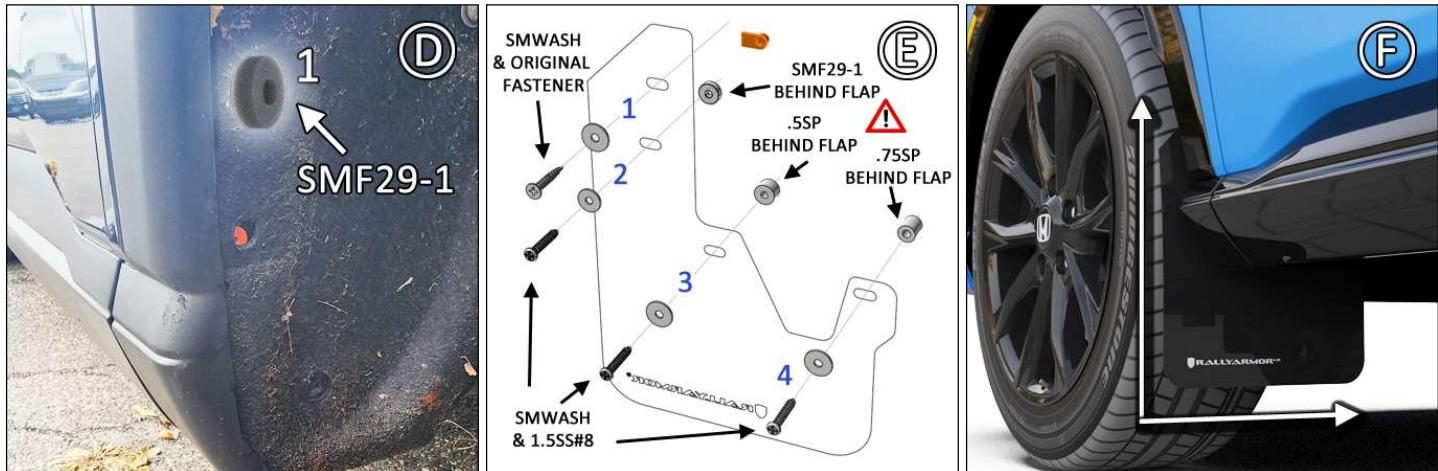



2023+ Honda CR-V Installation Instructions

REAR FLAP Parts x 1 Flap → 1 x BMF80-RE-M; BMF149; 1 x 1.5SS#8; 1 x BLKNUT; 1 x HXBLT; 1 x ORCLP; 3 x SMWASH;

1 x SSLNUT

IMAGE G If vehicle is equipped with factory guards, remove and skip this step. If vehicle is not equipped with guards, open up factory dimple, located on bumper edge. Create hole with a 3mm or 1/8 drill bit.

IMAGES H/I Place ORCLP over mount 1. Temporarily uninstall factory screw under vehicle. Place BMF80-RE-M between bumper & liner. Do NOT install underneath bumper. Fasten factory screw.

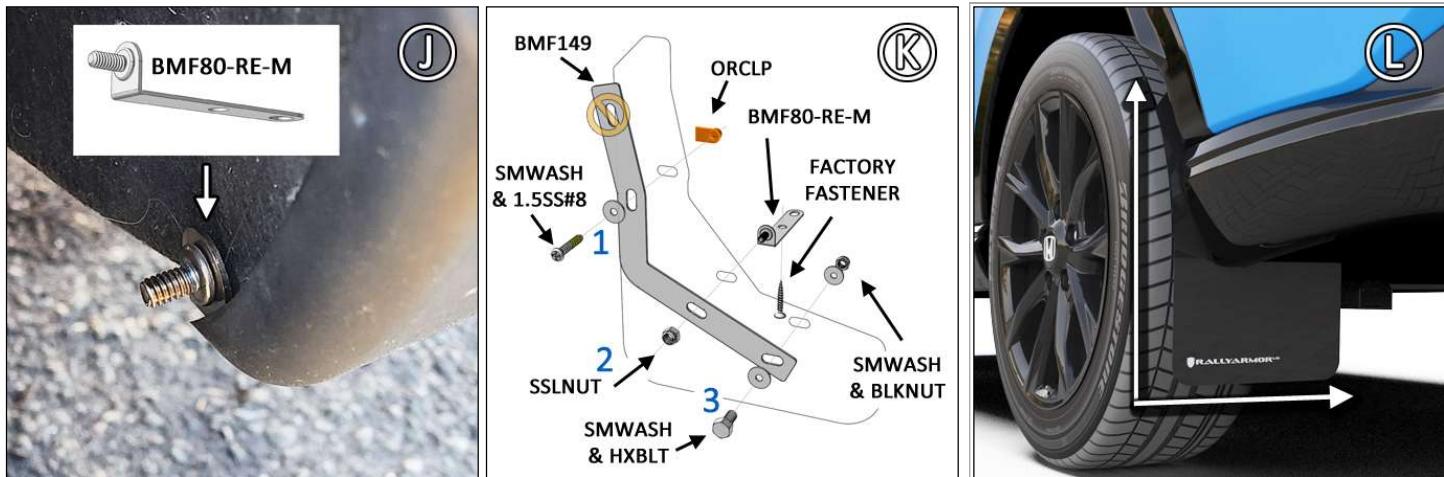


IMAGE J Place stud-side of BMF80-RE-M over bumper, facing tire.

IMAGE K Position logo-side of flap facing rear bumper and BMF149 over flap-side **facing tire. Do not install behind flap.**

Install SMWASH & 1.5SS#8 into BMF149 mount 1 and SSLNUT onto stud mount 2. Install SMWASH & HXBLT into mount 3 and SMWASH & BLKNUT on reverse side of mount 3. BMF149 top hole is not utilized. Top of BMF149 can be bent slightly to increase tension of flap against bumper.


IMAGE L Align flap to even ground before tightening fasteners until just seated.





2023+ Honda CR-V Installation Instructions

FRONT

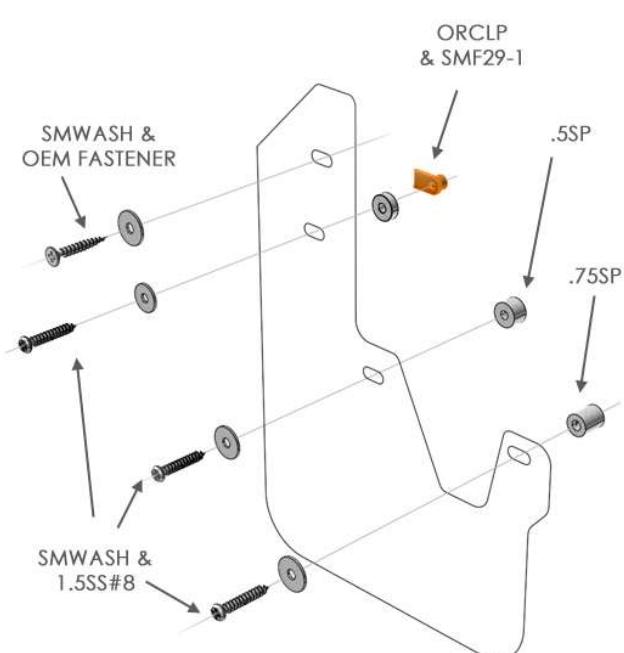

REAR

