



2026+ Subaru Trailseeker & Toyota bZ Woodland Installation Instructions



Manufacturer warranty covers material defects on new, never installed parts. Once installed, customer is responsible for all replacement part costs. Caution against blind spots during parking. Avoid curbs and excessive compression to flaps. **Ensure sufficient exhaust, wheel, suspension clearances.**

INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → www.rallyarmor.com/support

Recommended Tools Low-profile/offset/ratcheting/flat, Phillips screwdrivers, 10 & 11mm wrenches, pick, isopropyl alcohol & utility razor.

ABOUT OUR STANDARD IN MUD FLAPS Polyurethane is a high grade plastic that may feature superficial surface marks, These are normal visual variations that don't affect construction or performance. Most blend into the material over time.

Install on even surface using hand tools - no powered tools. AVOID OVERTIGHTENING HARDWARE.

MUD FLAP KIT PN MF156		PART DESCRIPTION	QUANTITY
MF156-LF		LEFT FRONT	1
MF156-RF		RIGHT FRONT	1
MF156-LR		LEFT REAR	1
MF156-RR		RIGHT REAR	1
BRACKET KIT PN BMF156			
BMF92-1		BRACKET LEFT REAR	1
BMF92-2		BRACKET RIGHT REAR	1
BMF156-1		BRACKET REAR	2
HARDWARE KIT PN HMF156			
.25SP		SPACER	4
1SS		SCREW	4
1.5SS		LONG SCREW	2
BLKNUT		NUT	4
HXBLT		BOLT	4
INS3		INSERT	2
SMF29-1		FOAM SPACER	2
SMWASH		WASHER	14
SSLNUT		LOCK NUT	4
UNUT2		CLIP	4



2026+ Subaru Trailseeker & Toyota bZ Woodland Installation Instructions

Do not fully tighten fasteners until mud flaps are completely aligned to vehicle.

FRONT FLAP Turn steering wheel towards installation side to access interior wheel well.

Mount Rally Armor logo printed side of flap facing rear bumper.

Parts x 1 Flap → 2 x .25SP; 2 x 1SS; 1 x 1.5SS; 1 x SMF29-1; 3 x SMWASH; 2 x UNUT2

FIGURE A Remove factory fasteners 1 – 3. Temporarily remove/keep under-vehicle fastener 4.

FIGURE B Move liner aside. Install UNUT2 on **REAR METAL** portion of mount.

FIGURE C Install UNUT2 on fender mount **BEHIND** rocker panel. Replace liner


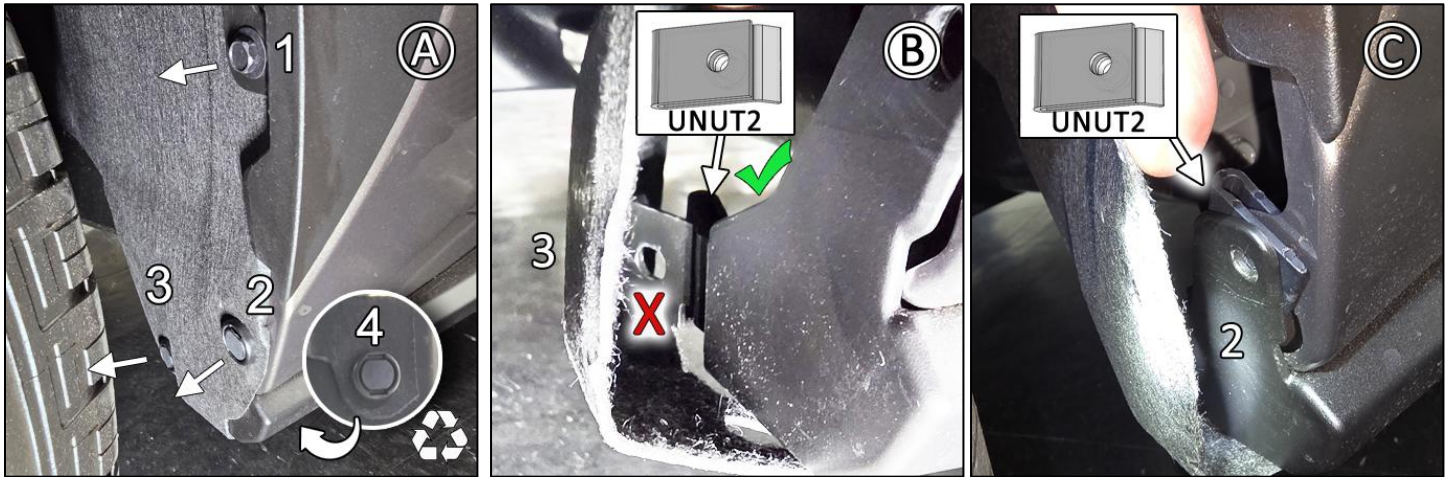


FIGURE D Remove backing from SMF29-1 by dabbing isopropyl alcohol over paper side, then adhere to .25SP.

FIGURE E .25SP mounts directly over liner mount 1 and SMF29-1 & .25SP over mount 3, behind flap. Reinstall factory fastener in mount 4.

FIGURE F Place flap against liner. Install SMWASH & 1SS into mounts 1 & 2 and SMWASH & 1.5SS into mount 3. Ensure flap is aligned to vehicle. Adjust preferred width before tightening washers flush to flap.



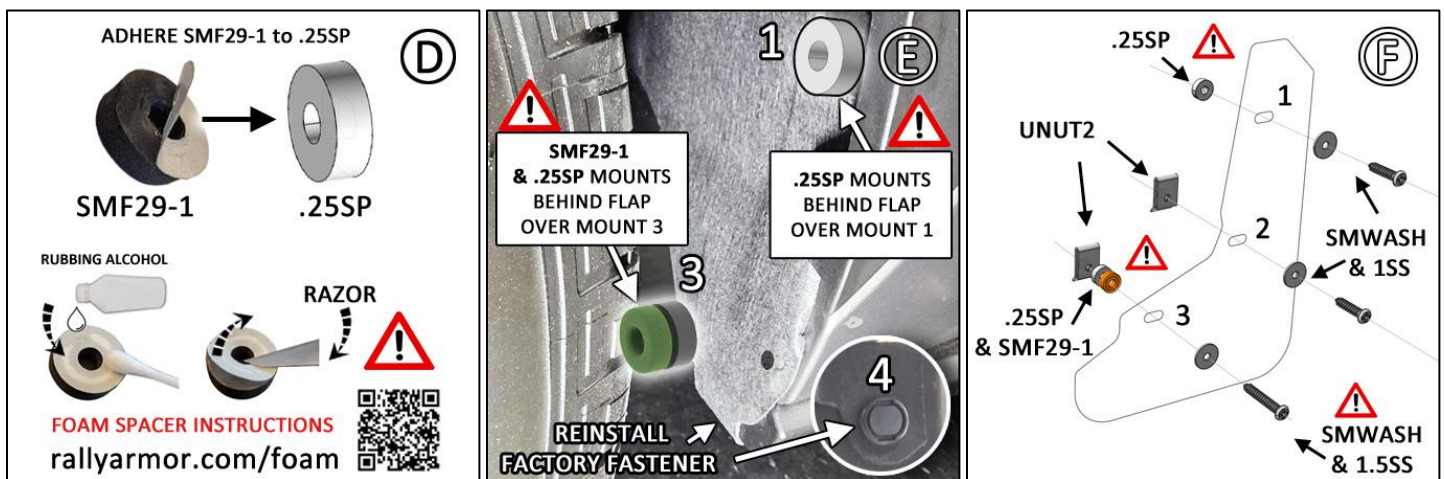

2026+ Subaru Trailseeker & Toyota bZ Woodland Installation Instructions

REAR FLAP Parts x 1 Flap → 1 x BMF92-1/2; 1 x BMF156-1; 2 x BLKNUT; 2 x HXBLT; 1 x INS3; 4 x SMWASH; 2 x SSLNUT

Mount Rally Armor logo printed side of flap facing rear bumper.

FIGURE G Remove factory fastener 1 and under-vehicle fastener 2.

FIGURE H/I. Place BMF92-1/2 BETWEEN liner & bumper cover. Install SMWASH & HXBLT into under-vehicle mount 2 and SMWASH & BLKNUT on reverse side of mount 2.


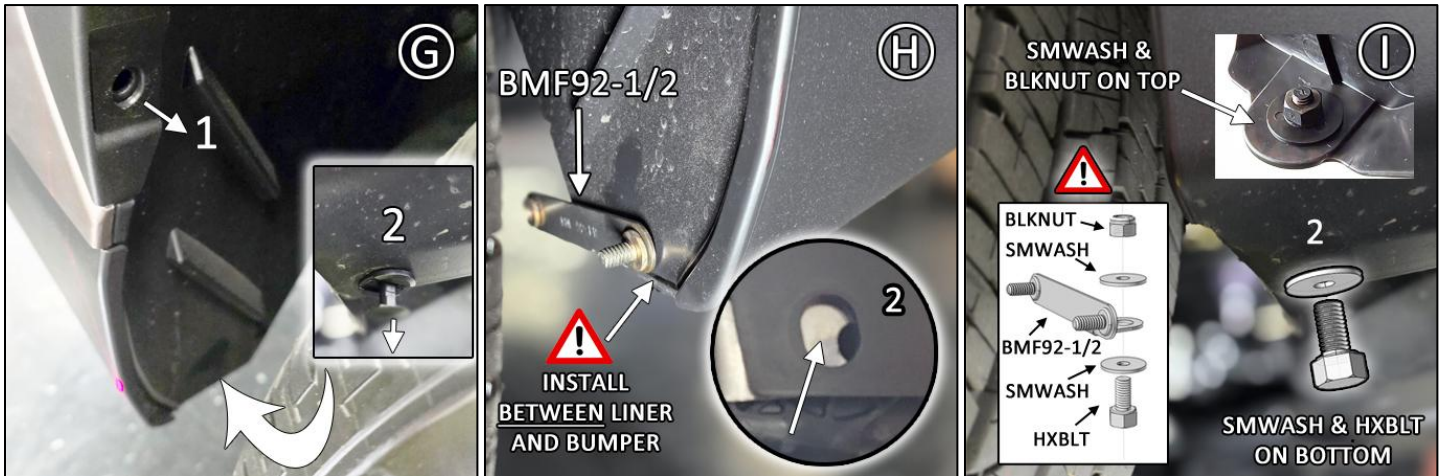


FIGURE J Position BMF156-1 over no-logo side of flap, then place SMWASH & HXBLT through flap & bracket mount 3. Fasten SMWASH & BLKNUT onto reverse side of flap/BMF156-1 mount 3 - does not mount to vehicle.

FIGURE K Position flap & bracket against liner, no-logo side facing tire. Place INS3 into mount 1 but do not lock fastener yet. Fasten SSLNUT onto mounts 4 & 5.

FIGURE L Align flap to vehicle. Adjust preferred width before tightening washers flush to flap. Lock INS3 into mount 1.



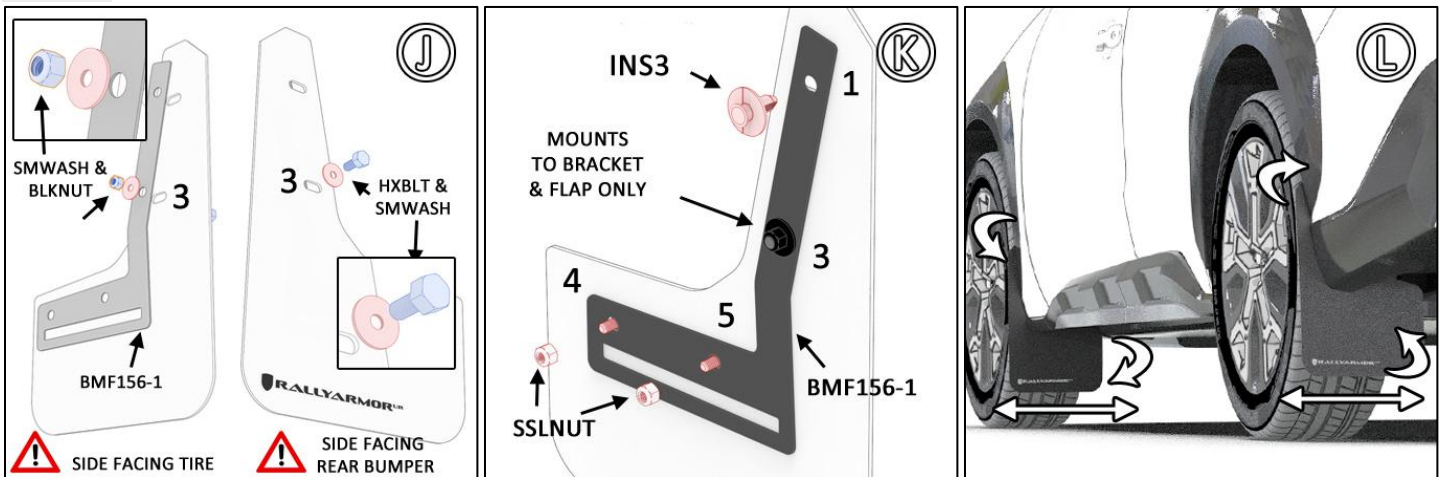

2026+ Subaru Trailseeker & Toyota bZ Woodland Installation Instructions

