IMF172

RALLYARMOR®
setting the standard in mud flaps®

2026+ TESLA MODEL Y LONG

Manufacturer limited-warranty covers material defects on new & never installed parts. Customer is responsible for installation, usage, and replacement part costs. Caution against blind spots during parking. Avoid curbs and compression to flaps. **Ensure sufficient wheel, suspension clearances**.

INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SUBMIT ORDER RECEIPT OR VEHICLE PHOTO to rallyarmor.com/support

Recommended Tools Low-profile offset, ratcheting, flat & Phillips screwdrivers, pick. **Install on even surface.**

Use hand tools, not powered. AVOID OVERTIGHTENING HARDWARE.

ABOUT OUR STANDARD IN MUD FLAPS Polyurethane is a high grade plastic that may have superficial surface marks that blend into the material over time. These **visual variations** do not affect construction or performance.

MUD FLAP KIT PN	MF172	PART DESCRIPTION	QUANTITY
MF172-LF		LEFT FRONT	**1**
MF172-RF		RIGHT FRONT	**1**
MF172-LR		LEFT REAR	**1**
MF172-RR		RIGHT REAR	**1**
HARDWARE KIT PN	**HMF172**		
.5BLKSS		SCREW	**8**
EXPANCH		EXPANSION ANCHOR	**8**
RACLP		CLIP	**12**
SMWASH		WASHER	**8**

Do not fully tighten fasteners until mud flaps are completely aligned to vehicle.


FRONT FLAP


Turn steering wheel towards installation side to access interior wheel well. **Mount Rally Armor logo printed side of flap facing rear bumper.** Parts x 1 Flap → 2 x .5BLKSS; 2 x EXPANCH; 3 x RACLP; 2 x SMWASH


IMAGE A Remove fasteners 1 & 2.

IMAGE B Fold ends of EXPANCH inwards.

IMAGE C Push EXPANCH flush into mounts 1 & 2. Expand EXPANCH by inserting a pick into its center, about 1" deep.

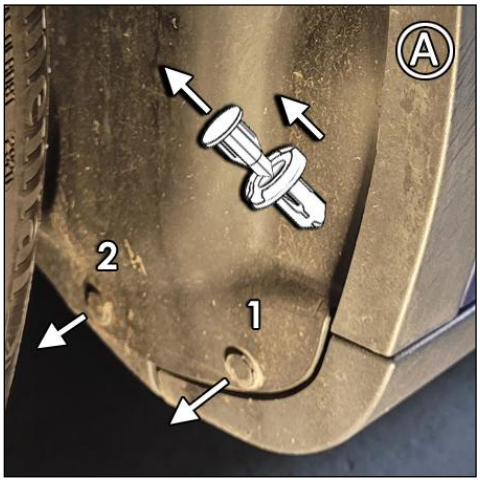

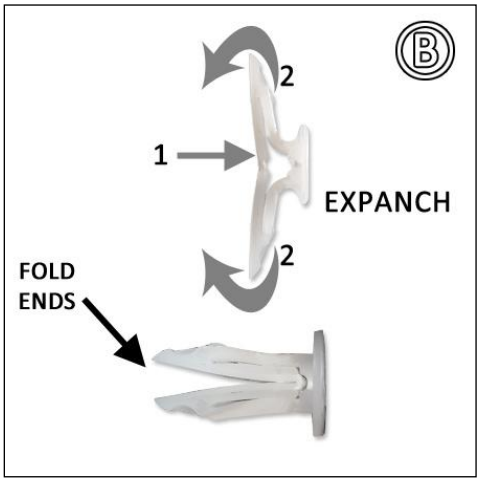

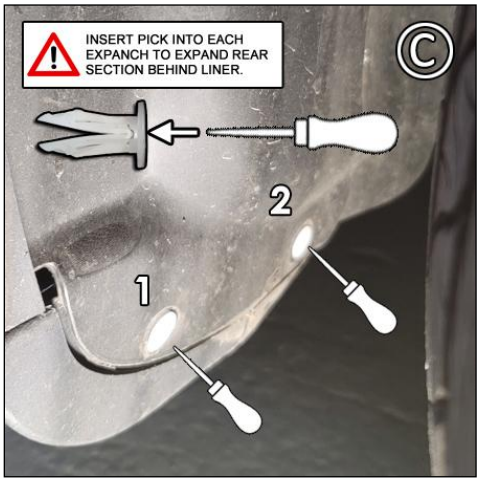

RALLYARMOR®
setting the standard in mud flaps®

2026+ TESLA MODEL Y LONG

⚠ TO INSTALL EXPANCH

1. FOLD OVER
2. INSERT FLUSH INTO MOUNTING POINT
3. INSERT PICK
4. EXPAND INNER WINGS



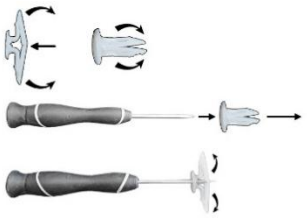


IMAGE D Place flap over lower mounting points. Install SMWASH & .5BLKSS into mounts 1 & 2. Ensure EXPANCH is expanded.
IMAGES E/F To prep flap for final alignment on vehicle, position inner edge of flap against fender flare. **DO NOT FULLY INSTALL**, **temporarily** mount edge of RACLP onto flare & flap. Align flap to even ground. Starting from the bottom, install the 3 x RACLP, **ensuring body of flap is flush against fender flare**. Tighten lower mounts.



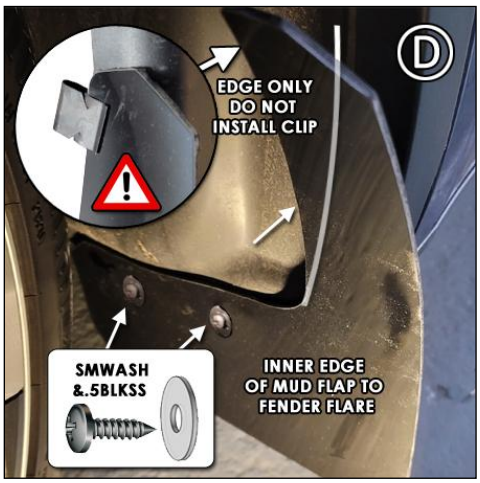

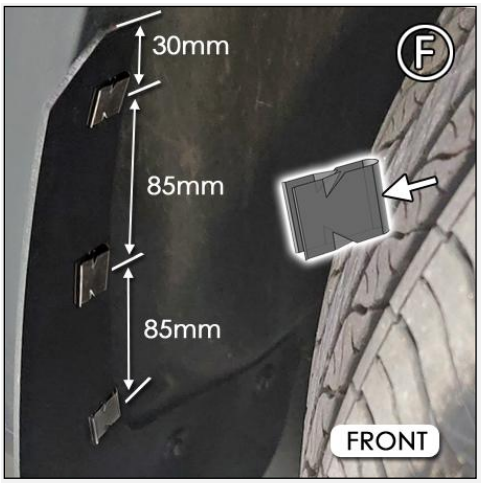

REAR FLAP

Parts x 1 Flap → 2 x .5BLKSS; 2 x EXPANCH; 3 x RACLP; 2 x SMWASH

Rally Armor logo side of flap faces rear bumper.





REAR MUD FLAP MOUNTS BEHIND TIRE ON REAR BUMPER

IMAGE G Remove fender liner fasteners 1 & 2.
IMAGES H/I Press stems of EXPANCH inwards. Insert flush into mounts 1 & 2. Expand EXPANCH by inserting a pick into its center, about 1” deep.

RALLYARMOR®
setting the standard in mud flaps®

2026+ TESLA MODEL Y LONG

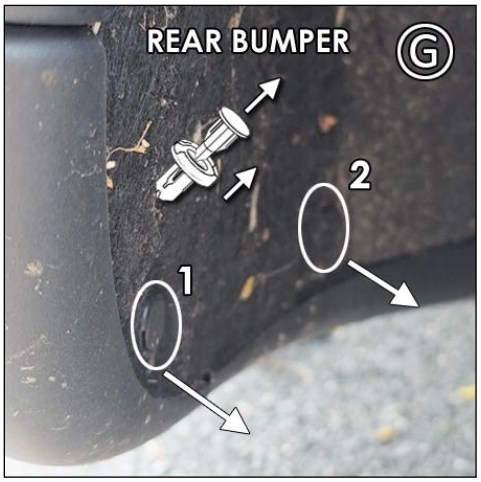

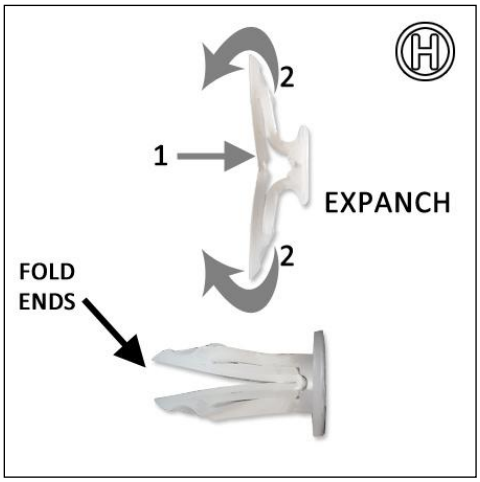

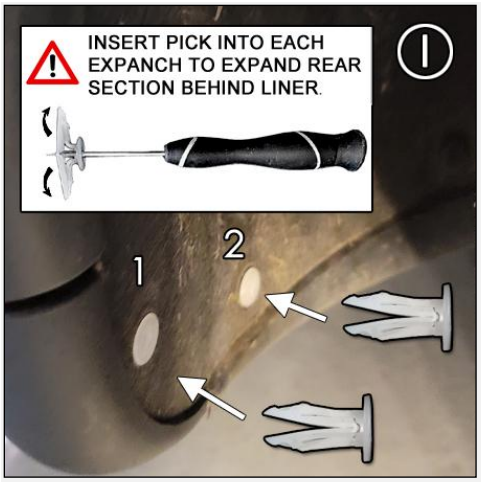


IMAGE J Place flap over bumper. Install .5BLKSS & SMWASH into mounts 1 & 2. Do not fully tighten.
IMAGES K/L **Align inner flap against flare**. To prep flap for final alignment onto vehicle, position inner edge of flap against fender flare. **DO NOT FULLY INSTALL**, **temporarily** mount edge of RACLP onto flare & flap. Align flap to even ground, starting from the bottom, install the 3 x RACLP. As each RACLP is installed**, ensure body of flap is flush against fender flare**. Tighten lower mounts.







RALLYARMOR®
setting the standard in mud flaps®

2026+ TESLA MODEL Y LONG

