

2021+ KIA Seltos Mud Flap Installation Instructions

View instructions and photos online www.rallyarmor.com

CARE AFTER INSTALLATION Once installed, the vehicle owner is responsible for the condition of the mud flaps and all costs associated with replacing damaged or lost parts. Warranty covers manufacturer defect on new, never installed parts.

⚠ Watch for blind spots when parking ⚠ Avoid contact with curbs, bumps and objects that can compress the flaps with excessive force. Be sure to check wheel clearances, especially on vehicles equipped with aftermarket wheels and suspensions.

QUESTION ON INSTALLATION? CONTACT US ONLINE www.rallyarmor.com/support

NEED TO PURCHASE REPLACEMENT PARTS? SEND RECEIPT OR PHOTO OF RALLY ARMOR LOGO ON FLAPS TO US www.rallyarmor.com/support

IMPORTANT NOTES

INSTALLATION KIT CONTENTS



QUANTITY	PART	ITEM ID
16	WASHER	SMWASH
2	INSERT	INS5
6	LOCK NUT	SSLNUT
4	PLASTIC SPACER	.25SP
2	FOAM SPACER	SMF29-3
2	SCREW	1SS
2	BRACKET REAR	BMF68-RE
2	BRACKET LEFT FRONT/LEFT REAR	BMF68-LT
2	BRACKET RIGHT FRONT/ RIGHT REAR	BMF68-RT

SSLNUT
Lock Nut



SMWASH
Washer



INSERT
INS5



SMF29-3
Foam
Spacer



.25SP
Spacer



1SS
SCREW



BMF68-RE
Bracket Rear



BMF68-RT
Right Front
Rear Rear

BMF68-LT
Left Front
Left Rear



Recommended Tools offset or ratcheting screw driver, 7/16th Wrench.
Important Tips Installation should be done on an even surface. Do not use power tools to tighten hardware. Hand tools only. Avoid overtightening.

RALLY ARMOR - A BIT ABOUT OUR STANDARD IN MUD FLAPS

Rally Armor mud flaps are fabricated from a high grade polyurethane plastic that is rigorously reviewed for quality and consistency. As with all manufacturing processes, controlled conditions and multiple QC checkpoints minimize major irregularities, however certain very minor surface layer marks appear periodically. These are visual variations that do not affect construction nor do they impede the performance of the flaps. Most matte away as the material ages naturally with continued exposure to the outdoors. Each flap is unique in appearance yet all are equally structurally sound.

2021+ KIA Seltos Mud Flap Installation Instructions

FRONT MUD FLAP

Hardware & Bracket 1 x Front Flap → 1 x BMF68-LT/RT; 4 x SMWASH; 1 x SSLNUT; 1 X 1SS; 1 x INS5

Turn steering wheel towards the side you are working on to gain access to the wheel well.

FIGURE A Remove but retain factory screws 1 and 2. Remove factory fastener 3.

FIGURE B Pull inner stem of INSERT INS5 out then discard. Install INS5 into mounting point 3.

FIGURE C Position BMF68-LT/RT bracket on mounting points on front mud flap. Top and bottom bracket mounting points are used.


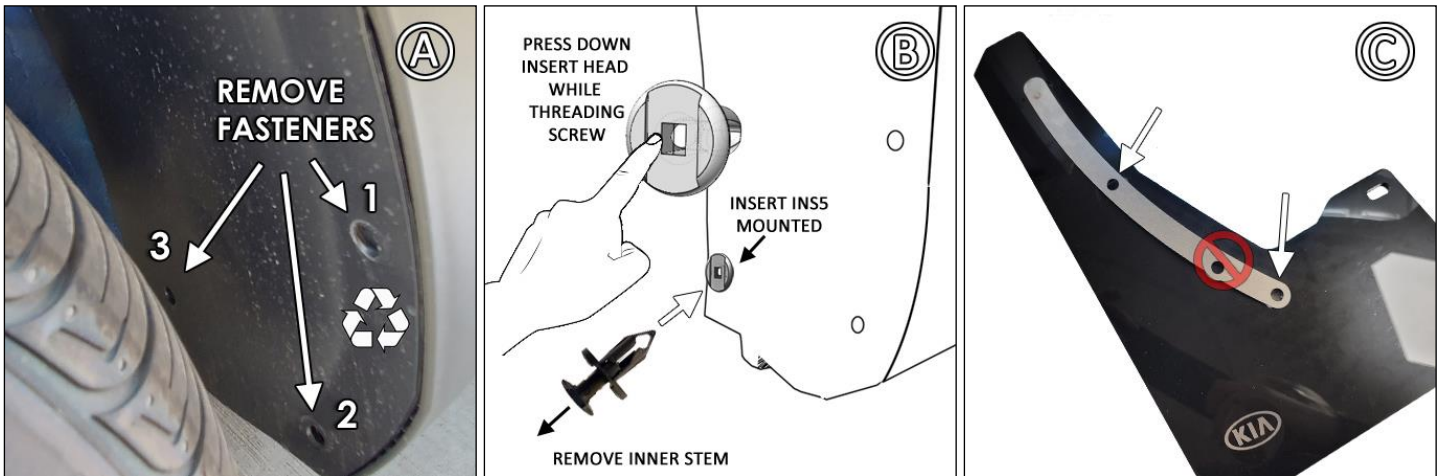


FIGURE D Align bracket mounts 1 and 2 to vehicle.

FIGURE E Place mud flap with logo facing rear of the vehicle against corresponding mounting points. Install original screws and SMWASH on mounting points 1 & 2. Use 1SS and SMWASH for inner mounting point 3 into INS5. Use SSLNUT and SMWASH on mount 4.

FIGURE F Align flap until perpendicular to even ground. Hand tighten only until washers are seated against the mud flap. Do not overtighten. Adjust upper portion of bracket as needed.

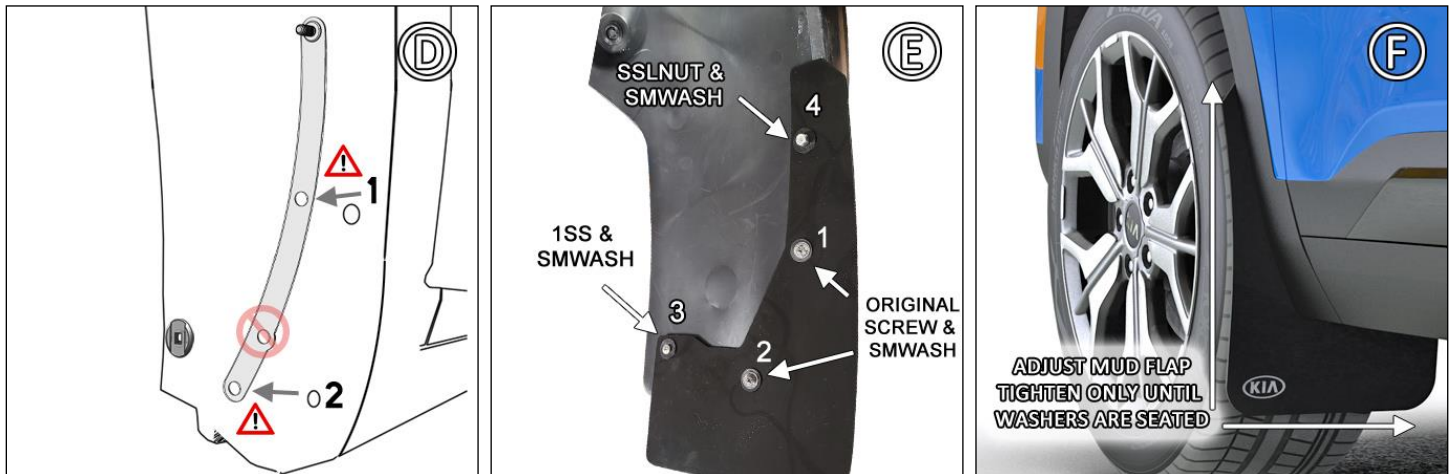

2021+ KIA Seltos Mud Flap Installation Instructions

REAR MUD FLAP

Hardware & Bracket for 1 x Rear Flap → 1 x BMF68-RE; 1 x BMF68-LT/RT; 4 X SMWASH; 2 x SSLNUT; 2 x .25SP; 1 x SMF29-3

FIGURE G/H Remove and retain rear factory liner screws 1, 2 and underside OEM fastener.

FIGURE I Install BMF68-RE with lower rear OEM fastener, stud facing front of vehicle.



FIGURE J/K Adhere SMF29-3 to rear section BMF68-LT/RT bracket. Gently contour bracket against bumper.

FIGURE L Place BMF68-LT/RT against mounting points. Lower mounting point of bracket is not used. Install .25SP spacers behind bracket.

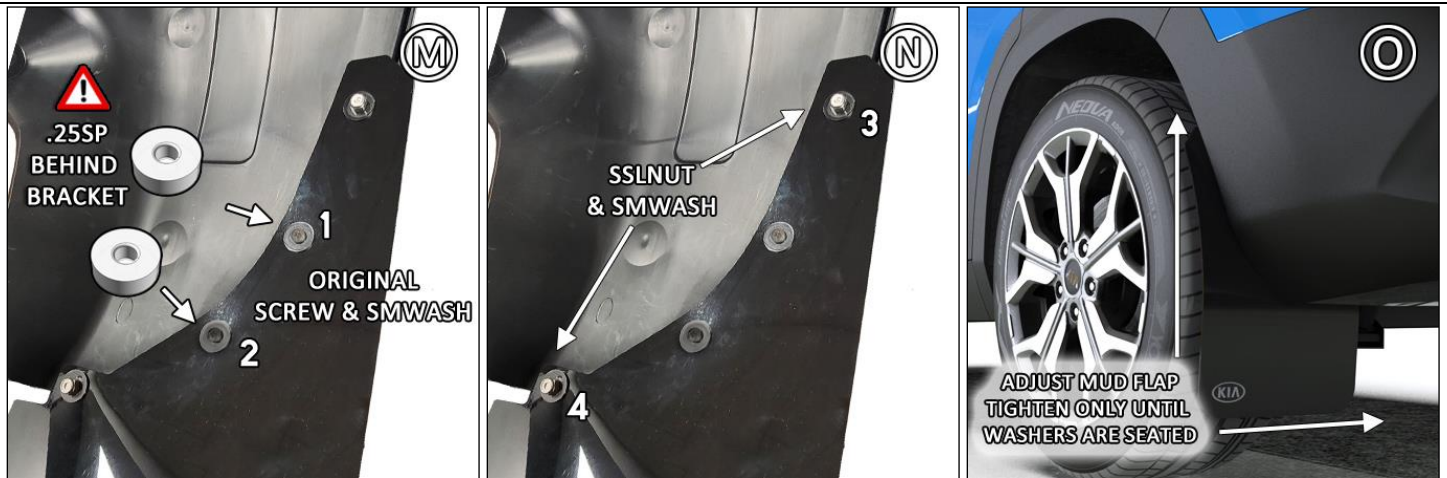


FIGURE M Place logo-side of mud flap facing the rear of the vehicle against corresponding mounting points of bumper. Install original screws & SMWASH through mounting points 1 & 2.

FIGURE N Install SSLNUT and SMWASH over lower and upper mounting points 3 and 4.

FIGURE O Align outer edge of the flap until the flap is perpendicular to even ground. Hand tighten until washers are seated. Do not overtighten. Adjust upper portion of bracket as needed to align with bumper profile.


2021+ KIA Seltos Mud Flap Installation Instructions



FRONT

RALLYARMOR® MF68 MOUNTING DIAGRAM

REAR

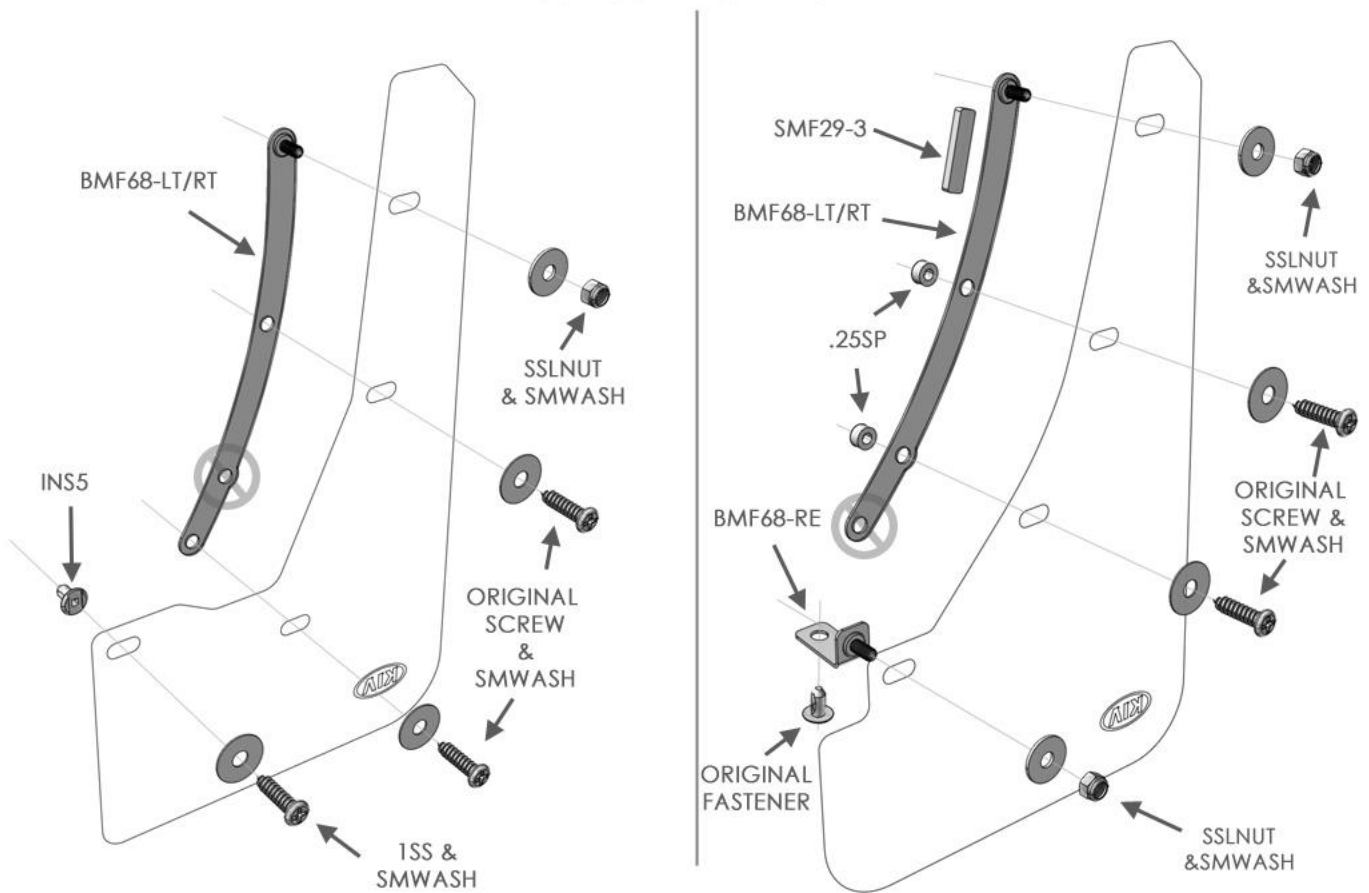

IMF68



2021+ KIA Seltos Mud Flap Installation Instructions

Content and images are copyright of Rally Armor® LLC