



2022+ VW MK8 GOLF GTI & GOLF R MUD FLAP INSTALLATION INSTRUCTIONS





Manufacturer warranty covers material defects on new, never installed parts. Once installed, all replacement part costs are the responsibility of the vehicle owner. Caution against blind spots during parking. Avoid curbs & excessive compression to flaps. **Check/ensure for sufficient exhaust, wheel, suspension clearances.**

INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → www.rallyarmor.com/support

Recommended Tools 7/16" wrench, offset or ratcheting Phillips screwdriver, Pick & T25 Torx bit.

Install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE.

ABOUT OUR STANDARD IN MUD FLAPS Polyurethane is a high grade plastic that may feature minor surface layer marks. These are visual variations that don't affect flap construction or performance. Most matte away as the material ages.

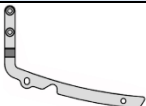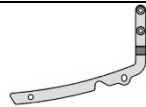CONFIRM ALL PARTS AND QUANTITIES BEFORE INSTALLATION		
MUD FLAP PN MF80 SEE PAGE 4	PART DESCRIPTION	QUANTITY
MF80-LF	LEFT FRONT	1
MF80-RF	RIGHT FRONT	1
MF80-LR	LEFT REAR	1
MF80-RR	RIGHT REAR	1
BRACKET PN BMF80		
BMF37-LF 	BRACKET FRONT	1
BMF37-RF 	BRACKET REAR	1
BMF80-RE 	BRACKET REAR 2	2
HARDWARE PN HMF80		
.25SP 	SPACER	4
37COVER 	COVER	2
1SS 	SCREW	4
1.5SS6TR 	LONG SCREW	4
SMF29-1 	SPACER 2	4
SMF29-3 	SPACER 3	2
SMWASH 	WASHER	12
SSLNUT 	LOCK NUT	6
HARDWARE FOR 2025+ MODELS ONLY		
.875SS-CP 	COUPLER	2



2022+ VW MK8 GOLF GTI & GOLF R MUD FLAP INSTALLATION INSTRUCTIONS

1SS-HXSET



EXPANSION SCREW

2

Do not fully tighten fasteners until flap is completely aligned to vehicle.

FRONT FLAP To access inner wheel well area, turn steering wheel towards installation side.

Parts x 1 Flap → BMF37-LF/RF; 2 x 1SS; 1 x 37COVER; 1 x SMF29-3; 2 x SMWASH; 2 x SSLNUT

FIGURE A Use a T-25 Torx bit to remove factory fasteners 1 & 2.

FIGURE B On screw-side of BMF37-LF/RF, curve angled section about 1/4" or 6mm, so it nests against liner.

FIGURE C On reverse side of BMF37-LF/RF, adhere SMF29-3 onto bottom section.


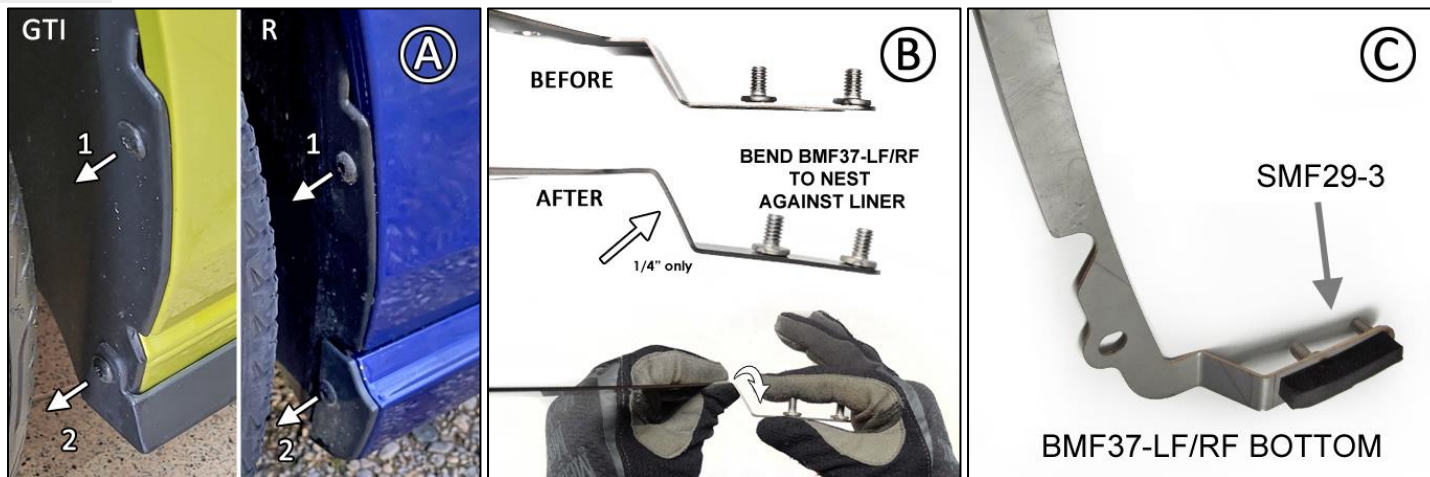


FIGURE D Install SMF29-3 section of BMF37-LF/RF under side skirt and facing liner. Repeat Figure B if needed.

FIGURE E Place flap, then WIDE section of 37COVER over BMF37-LF/RF mounts 3 & 4. SHORT side of 37COVER mounts behind flap. Loosely thread SSLNUT onto mounts 3 & 4 and 1SS & SMWASH into mounts 1 & 2.

FIGURE F Align flap to vehicle before tightening screws until washers just seat to flap.



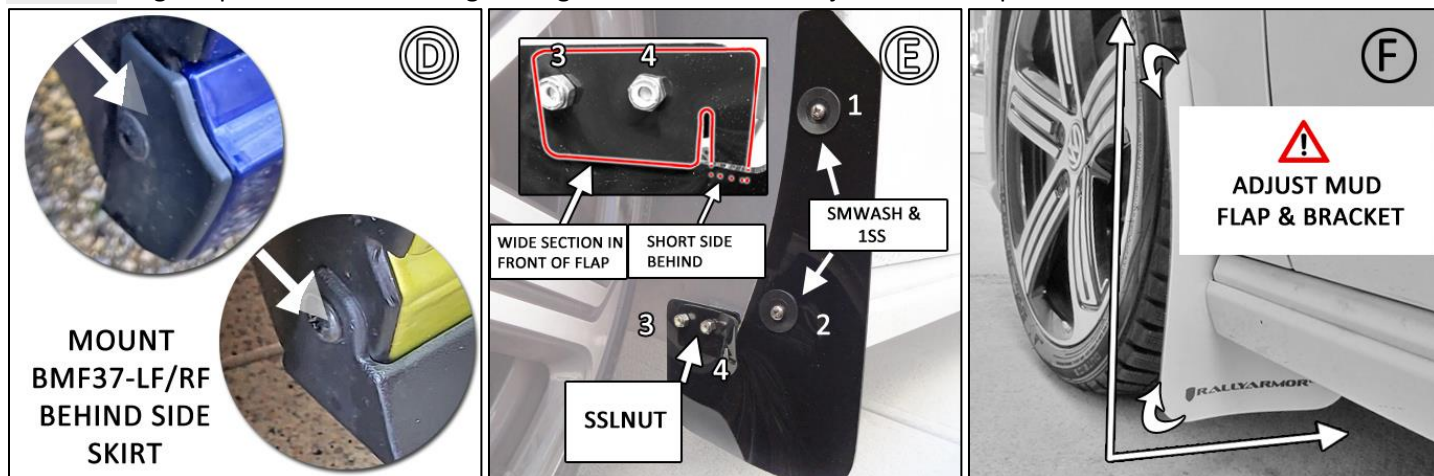

2022+ VW MK8 GOLF GTI & GOLF R MUD FLAP INSTALLATION INSTRUCTIONS

REAR FLAP Parts x 1 Flap → BMF80-RE; 2 x .25SP; 2 x 1.5SS6TR; 2 x SMF29-1; 4 x SMWASH; 1 x SSLNUT

2025+ Models ONLY: 1 x .875SS-CP; 1 x 1SS-HXSET

FIGURE G Remove factory fasteners 1 & 2. Temporarily remove factory screw 3.

FIGURE H Install SMWASH & factory screw into BMF80-RE mount 3.

For 2025+ models, install 1SS-HXSET & .875SS-CP into mount 3.

FIGURE I Adhere SMF29-1 to .25SP.






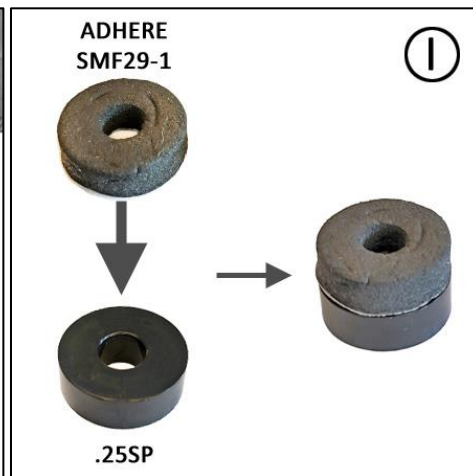


FIGURE J/K Logo-side of flap facing liner, position SMF29-1 & .25SP **behind** flap and over liner mounts 1 & 2. Install SMWASH & 1.5SS6TR into mounts 1 & 2 and through, **located behind liner**, factory clips. Install SMWASH & SSLNUT onto BMF80-RE mount 4.

FIGURE L Align flap to vehicle before hand-tightening fasteners just until seated.

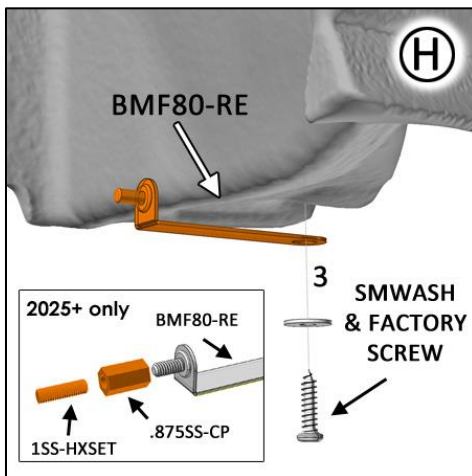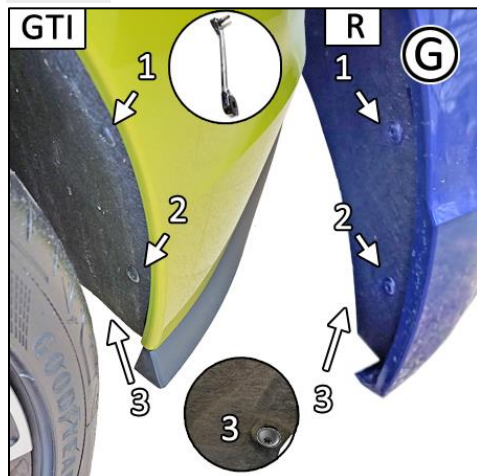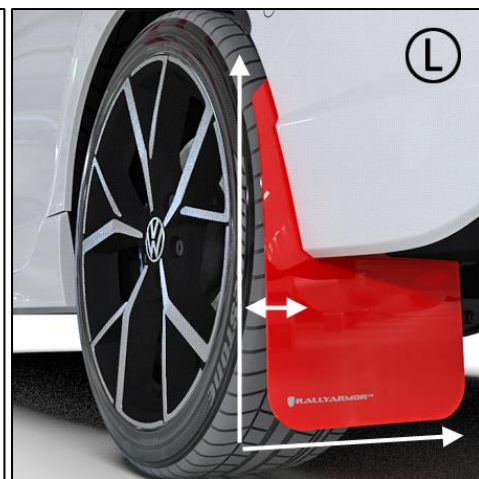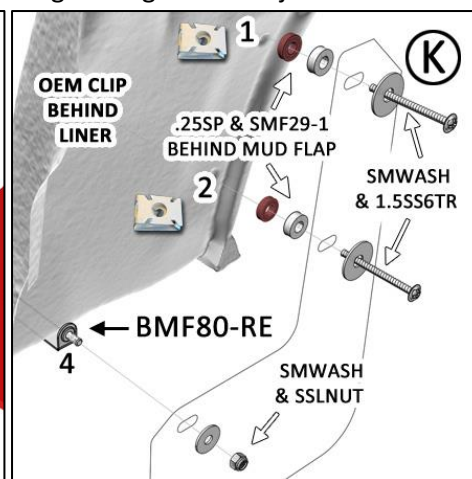

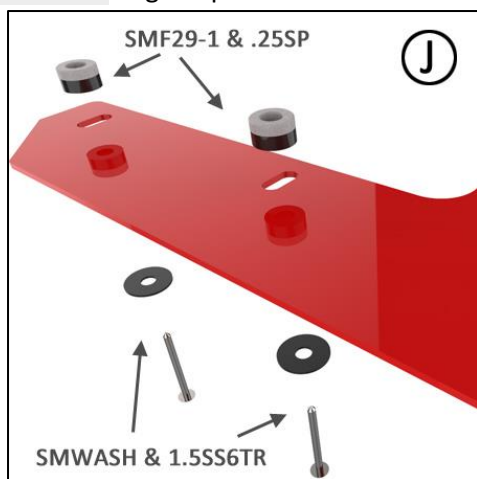

2022+ VW MK8 GOLF GTI & GOLF R MUD FLAP INSTALLATION INSTRUCTIONS

FRONT

MF80 MOUNTING DIAGRAM

REAR

